

QUORUM ELERT Instructions for Use

Inserting the batteries:

1. Open the battery compartment (remove the screw).
2. Install three AAA batteries.
 - **Caution:** Incorrect polarity may permanently damage the electronic components.
3. Press the function key (F). A beep is emitted.
4. If the beep is not emitted, remove the batteries and hold down the key (F) for 10 seconds.
5. Put the batteries back in place.
6. Close the compartment by putting the cover back in place and the screw.

Setting your own code:

A factory pre-set code is installed (1-1-1). To replace it with your own, follow the steps below:

1. Select a 3-digit code between 3 and 6. Write it down in a safe place.
2. Press the function key (F).
3. Enter the pre-set code (1-1-1). The red LED lights up.
4. Enter your personal code, the red LED turns off.

To change your personal code, follow the procedure above.

Activating the alarm:

1. Press the function key (F),
2. then the lock key (). The red LED lights up.

During a 10-second delay, the alarm beeps and the red LED flashes. After this delay, the alarm is active.

After 1 minute, the alarm switches to energy-saving mode while remaining on standby.

Deactivating the alarm:

You have a 3-second delay (factory pre-programmed delay) to enter your code in order to deactivate the alarm.

Adjusting the delay:

To change the pre-programmed delay, press the function key (F), then the "delay" key (0).

Choose the delay (3, 10, or 20 seconds) by pressing keys 1, 2, or 3 respectively.

Sensitivity adjustment:

You can increase or decrease the alarm's sensitivity to movement by using the slider on the left side of the ELERT alarm unit.

Securing your alarm:

The ELERT alarm is designed to be secured in several ways to protect numerous items:

1. Use the mounting clip to attach it to doors or objects.
2. With the provided Velcro strip, you can attach it to several surfaces like computers or metal doors.
3. With the provided nylon strap, you can protect other objects like bicycles, skis, golf clubs, or luggage.

Panic Alarm Function:

In case of emergency or danger, you can activate your alarm immediately by pressing the (F) and () keys simultaneously.

The alarm will sound for 30 seconds. If it was on standby at the time of triggering,

it will automatically re-arm itself.

Low battery indicator:

The lighting of the yellow indicator (LED) signals low batteries. Replace them with quality alkaline batteries as soon as possible.

This function is not available in energy-saving mode or turned-off mode.

WARNING!

This alarm is not waterproof.

The normal operating range is between **-20°C** and **50°C**.

This alarm is intended to help detect the movement of objects and is not infallible. According to experts, a loud noise is often the best defense against intruders and thieves.