

BT Viscount



Range of BT Viscount Telephones

Viscount	<i>Loop Disc. Dialling</i>	<i>Tone Dialling</i>	<i>Earth Recall</i>	<i>Earth/ Timed Break Recall</i>	<i>Secrecy (Mute)</i>	<i>Last Number Redial</i>	<i>Memory Store</i>	<i>Loudspeaker Monitor</i>
9501	•							
9501R	•		•					
9515AR	•	•		•	•			
9521R	•	•	•		•	•	• 12	
9525AR	•	•		•	•	•	• 10	
9531R	•		•			•	• 4	•
9601R		•	•					
9601AR		•		•				
9631AR		•		•		•	• 4	•


To store a number into the memory of a Viscount 10 (9525AR)

- Lift the handset
- Press and release the **MS** button
- Press and release the chosen store location (digits 0-9)
- Press the digits of the number to be stored (max 18 digits)
- Replace the handset
- The number is now stored under the chosen digit number


To automatically dial out a stored number

- Lift the handset
- Depress and release the **MR** button
- Depress and release the digit button relating to the stored number

Viscount 10 Layout (9525AR)

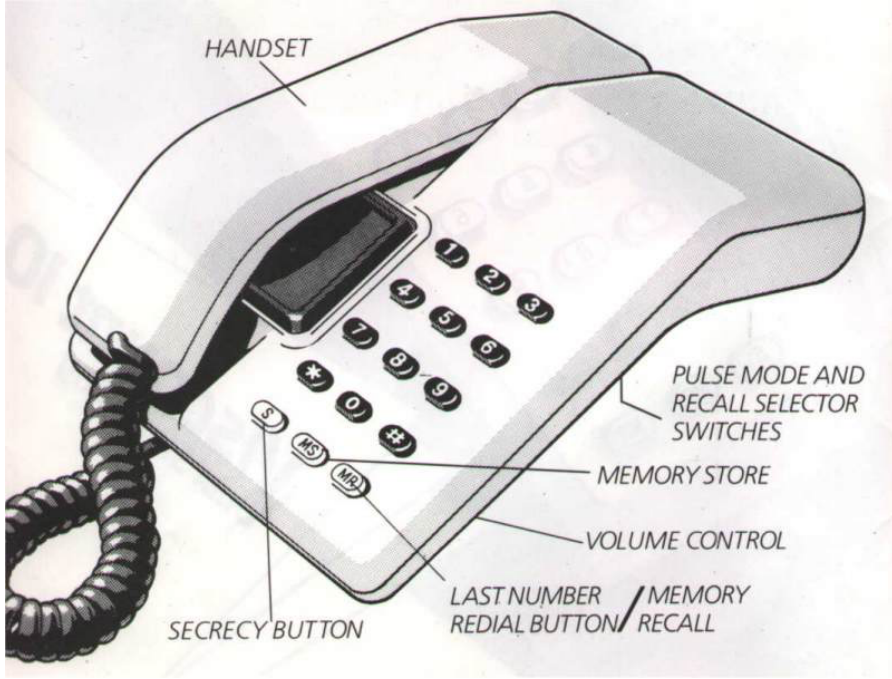

Viscount Recall & Dialling Settings

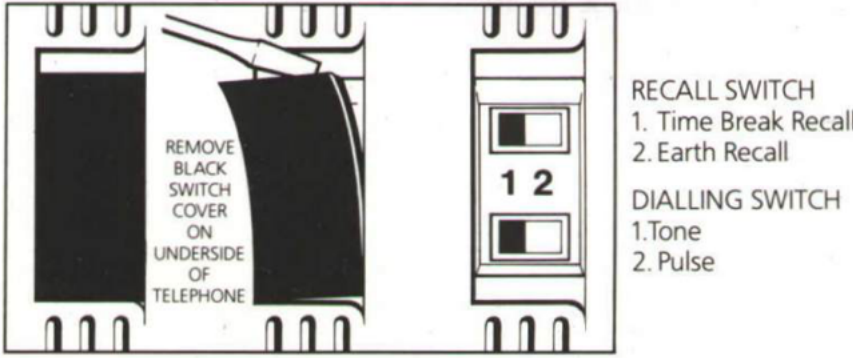

RECALL SWITCH
1. Time Break Recall
2. Earth Recall
DIALLING SWITCH
1. Tone
2. Pulse