 


Panasonic®

Remote Control Operation Guide

Model No. **EUR7722X80**

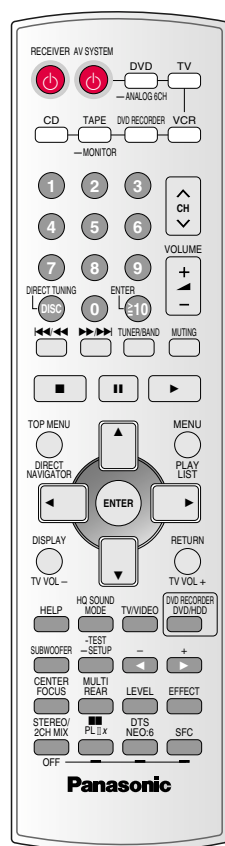

Welcome to the world of Home Theater.

This remote control is the key to your home theater experience.

RECEIVER




First, turn on the receiver.



Now, operate your other Home Theater components.

You may need to enter a code to operate some equipment.

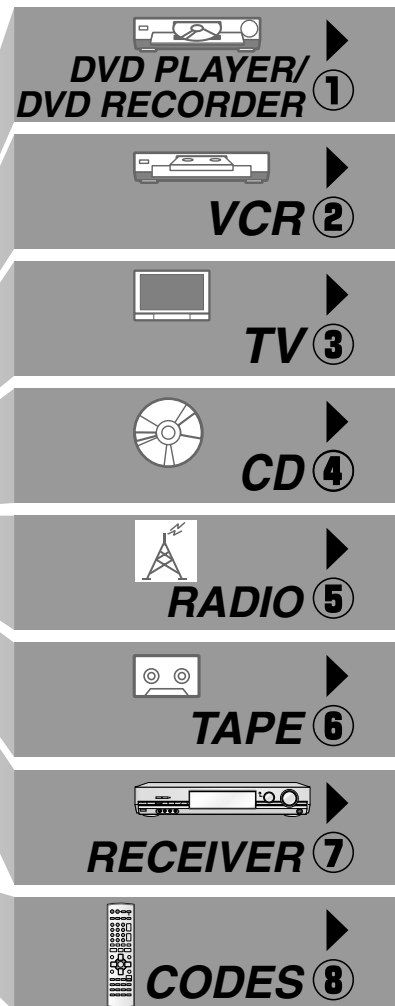

Actual operations depend on your equipment and software.
Be sure to read the instructions for the receiver and your other components.


© 2004 Matsushita Electric Industrial Co., Ltd. Printed in Malaysia

RQT7737-P H0804RT0

① DVD PLAYER/DVD RECORDER


Watching DVDs

Switch on

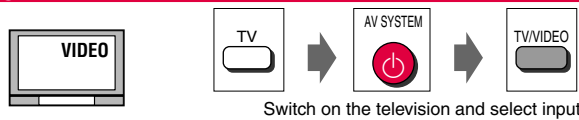


Switch on the player or recorder and start play

Switch off

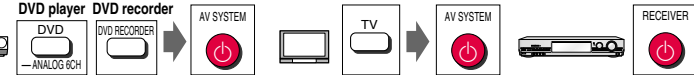

Operating the DVD player/DVD recorder

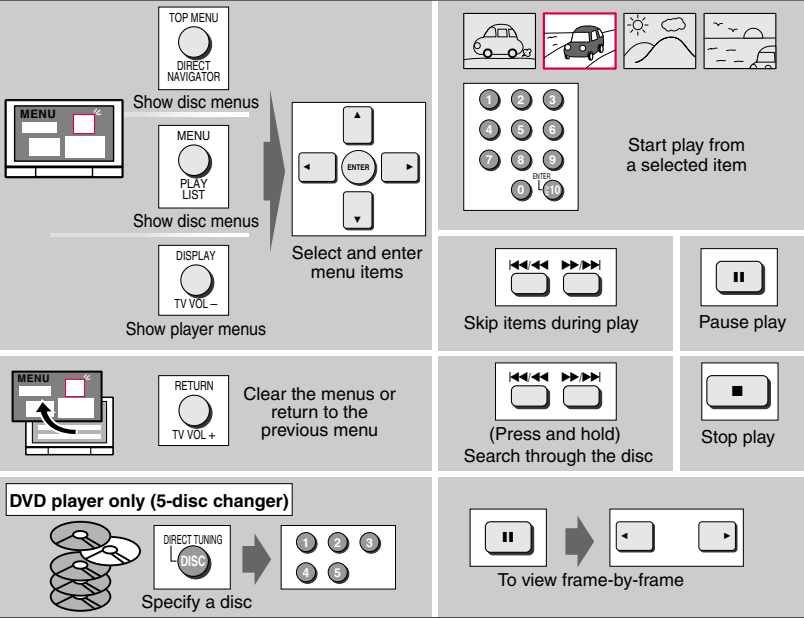

Operating the DVD recorder



Switch to the disc or hard disk drive

- When you cannot switch to the disc or hard disk drive, after performing the following operations, press this button again.


1. Press [DVD RECORDER].
 2. While pressing [ENTER], press and hold [8] or [9] for approximately 2 seconds.
- The factory setting is [9].

When using a Panasonic DVD recorder

Change the unit's remote control code to match the remote control code of the DVD recorder. Preparations: Check the remote control code of the DVD recorder.

For about one second hold down both [ENTER] and the button ([1], [2] or [3]) which the same number as the remote control code set by the DVD recorder.

The factory setting is [1].

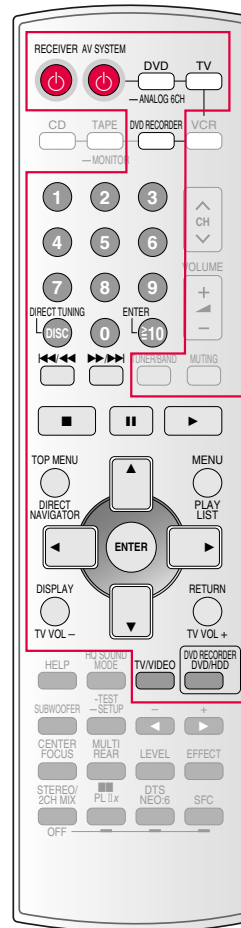

② VCR

Watching videotapes

Switch on




Switch on the television and select input



Switch on the player and start play


Switch off

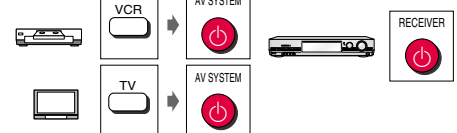

Operating the video deck



Rewind or fast-forward

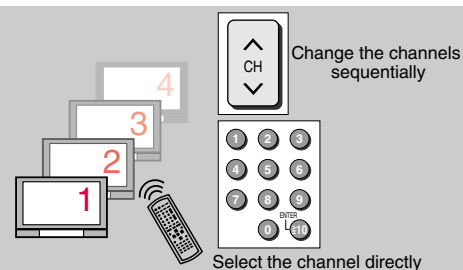


Select the channel directly



Stop play



Pause play

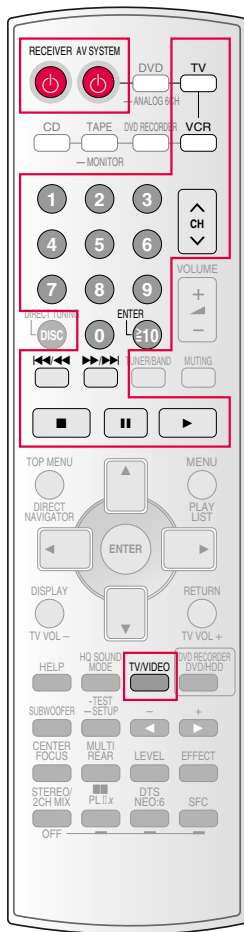

③ TV


Watching TV

Switch on




Switch on the television and select input

Switch off

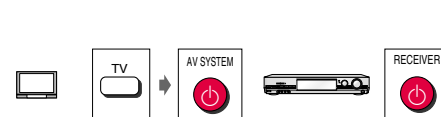


Operating the TV

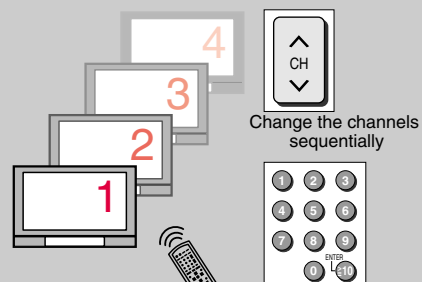


Change the channels sequentially

Select the channel directly


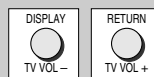


Adjust the volume



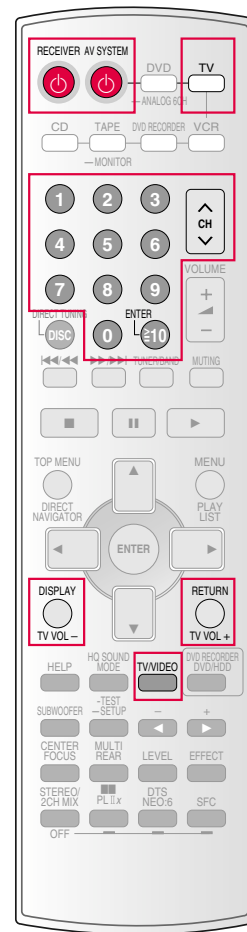


4 CD

Listening to CDs

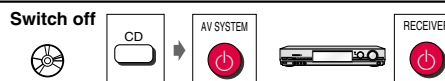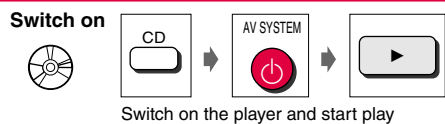


Operating the CD player

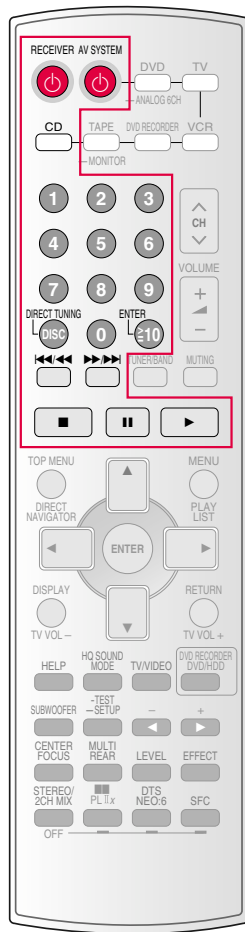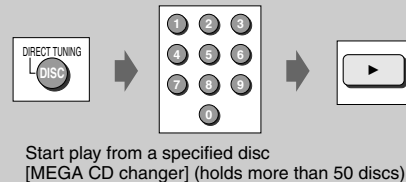
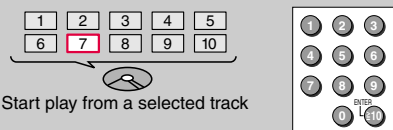


5 RADIO

Listening to the radio


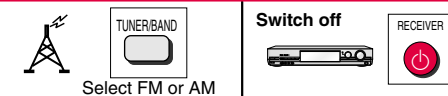


Operating the radio

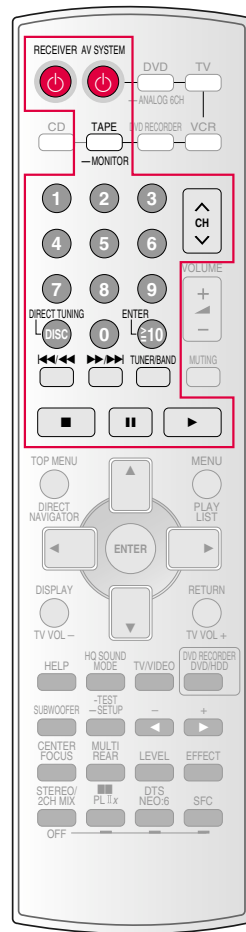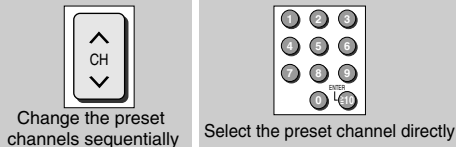

6 TAPE

Listening to tapes

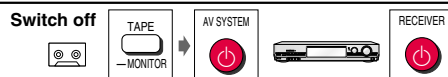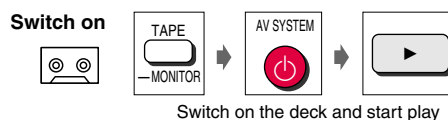


Operating the tape deck



7 RECEIVER


DOLBY PRO LOGIC IIx MODE/DOLBY PRO LOGIC II MODE

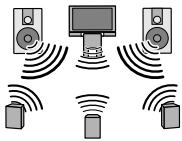

Select MOVIE (DOLBY EX), MUSIC or GAME when Dolby Pro Logic IIx mode or Dolby Pro Logic II mode is on




When you select MUSIC

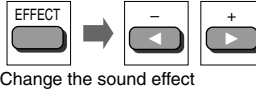

Change the sound effect


DTS NEO:6 MODE

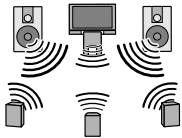

Select a DTS NEO:6 mode: CINEMA or MUSIC



When you select MUSIC

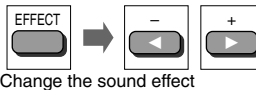

Change the sound effect



SFC MODE



Select MUSIC or AV/MOVIE

Select the speaker channel and adjust its output level

Change the sound effect

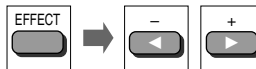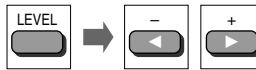

Adjusting speaker channel balance




Start a test signal



Select the speaker channel and adjust its output level



Stop the test signal

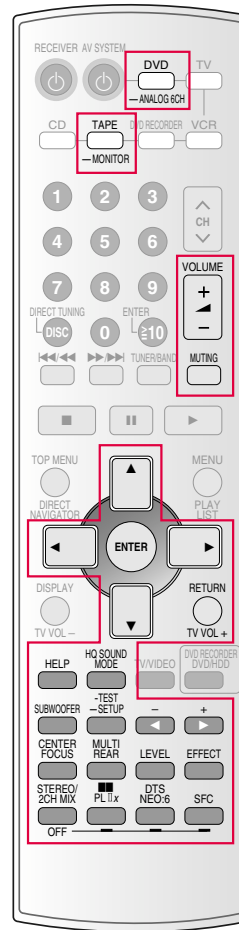

Other functions

To select STEREO or 2CH MIX mode	STEREO/2CH MIX
To cancel surround effect	OFF
To mute the volume	MUTING
To adjust the volume	VOLUME
To select DVD ANALOG 6CH	DVD ANALOG 6CH (Press and hold)
To start tape monitoring when recording to a 3 head cassette deck or using a graphic equalizer	TAPE MONITOR (Press and hold)
To display help messages To show the current remote control mode	HELP
To adjust subwoofer output level	SUBWOOFER
To turn the center focus mode on	CENTER FOCUS
To turn the multi rear surround mode on	MULTI REAR
To turn the HQ sound mode on	HQ SOUND MODE
To operate the On Screen Display menu (Press and hold)	TEST SETUP

8 CODES

This remote control can operate Panasonic and Technics audio-visual equipment that has remote control sensors. You may need to change the remote control code.

It can also operate some other brands of televisions, video cassette players, and DVD players. Check the table for the brand and enter the code as follows.

Changing the codes

TV



VCR



DVD player



Press and hold the button corresponding to the equipment

1 2 3

4 5 6

7 8 9

0

Enter the first digit

1 2 3


4 5 6

7 8 9

0

Enter the second digit

The remote control outputs the on/off signal.
If the code is correct, the equipment turns on or off.
If it doesn't, try entering another code.

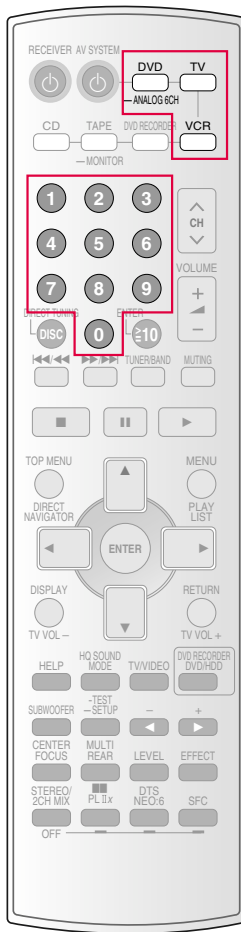

Code table

	TV	VCR	DVD player
Panasonic	01/02/26	01/02/09/33	01/40
Denon	—	—	01/17
Ferguson	—	—	02
Fisher	14	13/14/15/18 34	—
Funai	—	08/30	—
G.E.	02/03/07/09	02/03/11	—
GoldStar	07/15	27	—
Go-Video	—	—	12
Hitachi	05/07	09/10/11	11
JVC	12	19/25/31/38 39/40	09
Kenwood	—	—	15
LXI	03/06/07/10 14/15	10/13/14/15 18/27/30	—
Magnavox	06/07/11/15 22	02/09/12	—
Mitsubishi	07/15/16/21	21/22/28/29	06
NEC	07/15	19/25/31/38	—
Nordmende	—	—	02
Philco	06/07	02/09/12/30	—
Philips	06	02/09/12	04/16

	TV	VCR	DVD player
Pioneer	02/10/19	09	03
Polkaudio	—	—	16
Quasar	02	01/02/09/33	—
Raite	—	—	13
RCA	03/07/09/13 23/24/25	02/03/04/09 10/11/12/23 24/26	02
Saba	—	—	02
Sampo	—	—	14
Samsung	—	—	10
Sanyo	14	14/18/34	—
Sharp	08/21	16/17	08
Shintom	—	32	—
Sony	04	05/06/07/35 36/37	05
Sylvania	06/07/15	02/09/12/30	—
Symphonic	17	30	—
Technics	—	—	01
Thomson	—	—	02
Toshiba	10/21	23/24	04
Yamaha	—	—	01
Zenith	18/20	20	07/12

- Note that this remote control cannot operate some equipment and that it may not be able to perform some operations.
- Re-enter the codes after you change the batteries.