

AT&T U-verse S10 programming



Direct code entry instructions

Each device (TV, DVD, VCR, etc.) has its own "code". The mode keys can only be programmed with codes starting with the number assigned to that device. [TV codes](#) must start with "1"; [DVD codes](#) with "2"; [AUX codes](#) with "3", "4", "5" or "6".

Step 1: Press and hold the mode key that matches the device you want to program ("TV", "DVD", or "AUX") along with the "OK" key. Hold both keys for one second,

then release. The mode keys will flash twice to indicate you are in programming mode.

Step 2: Enter the [4-digit code for your device](#) using the keypad on the remote. The appropriate mode key will give a long flash indicating that it received the code.

Step 3: Point the remote control at your equipment and press the "POWER" key. Press the "POWER" key again to turn the device back on and check other functions. If your device does not turn off, or not all functions work, then start again with the next code in the list. A brand may have multiple codes and you may have to enter several codes before finding the code that works best.

Note: In Step 2, the selected mode key will flash 8 times and exit programming mode if:

- an invalid code is entered
- no keys are pressed within 30 seconds
- you accidentally press a key other than the number keys

Code search

The Code Search method will scan through all of the IR codes to find one that works with your device.

Step 1: Power on the device to be controlled and point the remote control towards it.

Step 2: Press and hold the mode key that matches the device you want to program ("TV", "DVD", or "AUX") along with the "ENTER" key. Hold both keys for one second, then release. The 4 mode keys on the remote control flash twice to indicate you are in search mode.

Step 3: Search by pressing the "SCAN->\FF" key repeatedly until the device turns off (the selected mode key will flash once for each press of the "SCAN->\FF" key). Pause briefly between each key press to allow your device enough time to respond.

Step 4: Press the "POWER" button on the Remote to turn the device back on. If the device does not turn on, you may have pressed the "SCAN->\FF" key too many times. Press the "REW\<-SCAN" key to scan backwards and test the "POWER" button again. Check common functions like Volume+, Volume- and MUTE. Do not test "REW\<-SCAN", "SCAN->\FF", "FWD" or "EXIT". If there is any problem with any of the keys, press the "SCAN->\FF" button and search until you find a code that operates all the functions properly.

Step 5: Press the "ENTER" key to save the code. The appropriate mode key will give a long flash indicating successful programming.

Notes:

- If the programming is interrupted or inactive for more than 30 seconds, the mode keys will flash 8 times. This indicates the remote has left programming mode and returned to normal operation without saving any changes.
- If you have an integrated or combination unit such as TV/DVD, TV/DVD/VCR, etc., each component of the unit may need to be programmed separately by using the mode keys. For instance, for a TV/DVD, search for the device code of the TV and program into the TV mode key, then search for the device code of the DVD and program into the DVD mode key.

Restoring factory defaults

Perform the following procedure to return all programmed codes to factory defaults:

Step 1: Press and hold the "AT&T" key along with the "OK" key. Hold both keys for one second, then release. All the mode keys will flash twice.

Step 2: Enter 9 0 0 using the numeric keypad. The "AT&T" key will give a long flash to confirm successful programming. The remote control then returns to its normal state.