


Lexmark 7000

Color Jetprinter

1


Unpack your printer

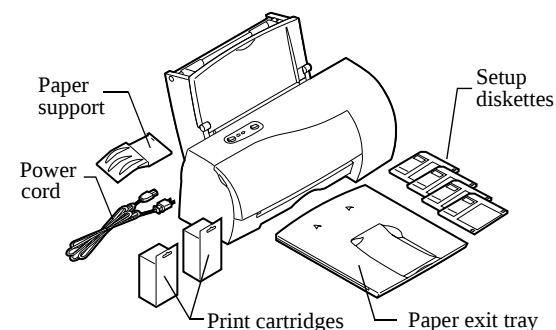

- 1 Remove all tape from the Lexmark 7000 Color Jetprinter™.
- 2 Remove the print cartridges packed with the printer. **Do not install until step 7.**

2

Install paper exit tray

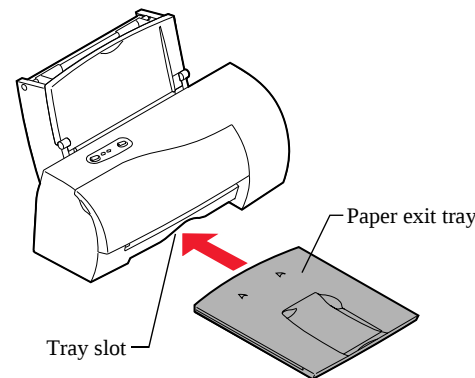


- 1 Make sure the printer is on a level surface.
- 2 Line up the paper exit tray with the tray slot underneath the printer.
- 3 Hold the printer in place and slide the tray firmly into the tray slot. The tray clicks into place.

When the tray is properly installed, it slides easily in the tray slot but cannot be pulled all the way out of the printer.


3

Install paper support

- 1 Turn the printer so the back faces you.

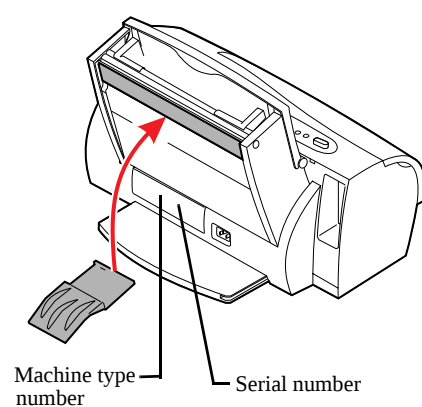


- 2 Hook the bottom of the paper support under the lip on the back of the printer.

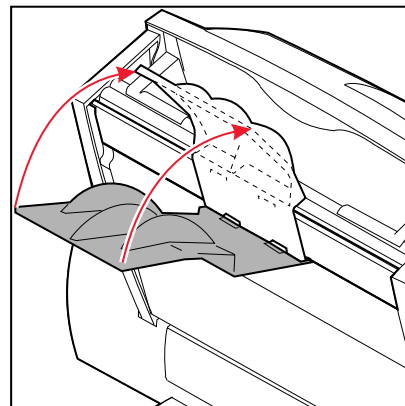

- 3 Push firmly until it *snaps* into place.

4

Connect your printer

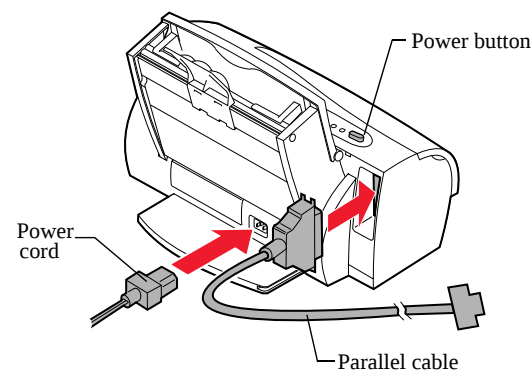


- 1 Connect the parallel cable to the computer and printer. Fasten the metal clips on the printer to the parallel cable. Use a parallel cable that supports bidirectional communication (IEEE 1284-compatible), such as Lexmark P/N 1329605.
- 2 Connect the power cord to the printer and fasten the metal clips on the printer to the parallel cable.
- 3 Plug the power cord into a properly grounded electrical outlet.
- 4 Press the power button . The power light | comes on.

5


Load paper

The sheet feeder holds approximately 150 sheets of paper. To load paper:

- 1 Open the paper load door.

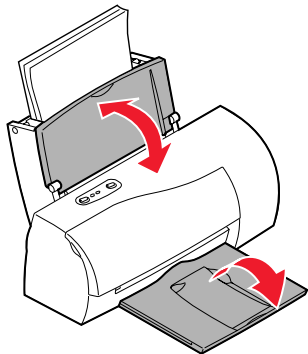

- 2 Extend the paper exit tray.
- 3 Insert paper.
- 4 For different size paper, squeeze the left paper guide release lever and move to the correct paper size.

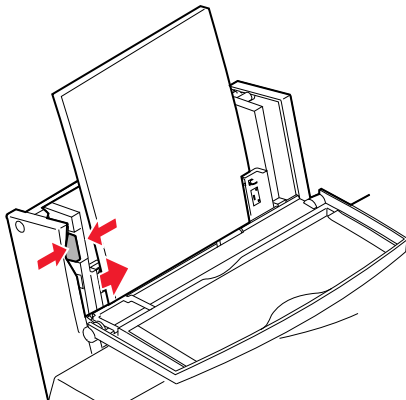


- 5 Close the paper load door.
- For information about loading other types of paper into the sheet feeder, or using the manual feeder, see the Online Guide.

Lexmark Technical Support Center

See the printer registration card for the number appropriate for your country.

Please have the following information available so we may serve you faster. (Located on the back of the printer)

Machine Type number _____
Serial number _____
Date purchased _____
Store where purchased _____

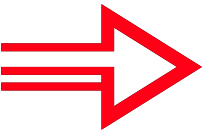


6.2

Windows 3.1

To install the printer software:

- 1 Make sure the printer's power is on.
- 2 Start Windows.
- 3 Insert Setup Disk 1 into drive X, where X is the letter of your floppy drive.
- 4 From the Windows Program Manager menu bar, choose **File**, and then choose **Run**.

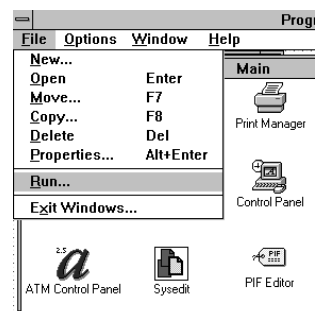

- 5 In the Command Line: text box, type **X:setup**, and then click **OK**.
- 6 When prompted by the printer software, insert Setup Disk 2 into drive X.
- 7 When prompted, continue with step 7, "Install print cartridges."


6.1

Windows 95

To install the printer software:

If Windows 95 prompted you to install the printer software, and you have already installed it, continue with step 7, "Install print cartridges."

- 1 Make sure the printer's power is on.
- 2 Start Windows.
- 3 Insert Setup Disk 1 into drive X, where X is the letter of your floppy drive.
- 4 From the Start Menu choose **Settings**, and then choose **Printers**.

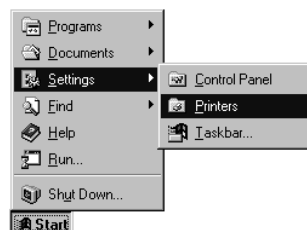


- 5 From the Printers folder double-click **Add Printer**.
- 6 Follow the instructions on the screen
 - When you are prompted to select the printer's manufacturer and model, click **Have Disk**.
 - In the "Install From Disk" dialog box, type **X**, and click **OK**.
- 7 When prompted by the printer software, insert Setup Disk 2 into drive X.
- 8 When prompted by the printer software, continue with step 7, "Install print cartridges."


7

Install print cartridges


- 1 Open the printer front cover.

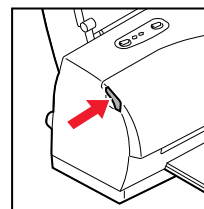

- 2 Remove tape from both cartridges. **Do not touch copper area!**

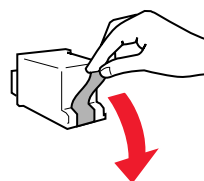

- 3 Insert both cartridges.
- 4 **Push back** on the cartridges until they **snap** into place.

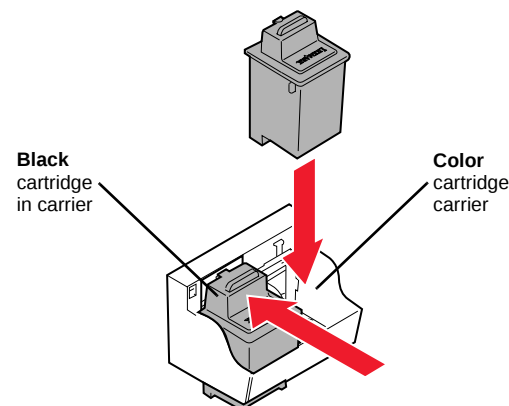

- 5 When prompted by the printer software, **make sure you align the print cartridges**.
- 6 When installation is complete, remove the Setup diskette.

8

Open Online Guide

Your user's guide information is now online to give you easier access to information such as how to:

- use printer software
- load paper
- use manual feeder
- change print cartridges
- change printer settings
- print from Windows applications
- print from DOS applications
- reset printer defaults
- order supplies
- solve problems

You can also find information about:

- who to call if you need help

Within the Online Guide, you will find underlined words or "hot text." Click the hot text to instantly view more information on a related topic.

Windows 3.1 or Windows for Workgroups

From the Lexmark 7000 Color Jetprinter program group, double-click the Online Guide icon:




Windows 95

- 1 From the Start menu, click Programs.
- 2 Click Lexmark 7000 Color Jetprinter.
- 3 Click Online Guide.

Removing the paper exit tray

If you need to repack the printer in its original box, you must remove the paper exit tray.

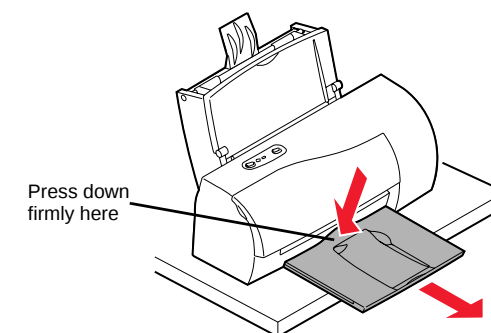


To remove the paper exit tray:

- 1 Place the printer near the table edge.
- 2 Pull the paper exit tray as far out of the printer as possible. The tray should extend beyond the table edge.
- 3 Press down firmly in the center of the tray at the point where the tray enters the printer.
- 4 Pull the paper exit tray all the way out of the printer.

Store the setup sheet

Store this Setup sheet in the bookholder behind the printer's paper load door.

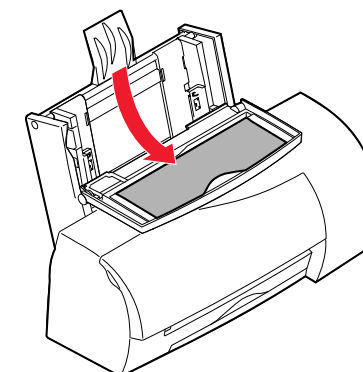

安全のためのご案内

ご使用の製品にこの記号がついていない場合は、正しく接地(アース)してある電源コンセントに接続する必要があります。
電源コードは、絞線の邪魔となるようなものがない近くの電源コンセントに接続してください。
整備・修理が必要な場合、使用説明書にその旨の記載がある場合を除いて、専門の技術者にご連絡ください。

This product is designed, tested, and approved to meet strict global safety standards with the use of specific Lexmark components. The safety features of some parts may not always be obvious. Lexmark is not responsible for the use of other replacement parts.

Lexmark, Color Jetprinter, and ColorFine are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.
Windows is a registered trademark of Microsoft in the U.S. and other countries.
Other trademarks are the property of their respective owners.
©1996 Lexmark International, Inc. Lexington, KY 40511-1876 USA