

RCA RP3722 OPERATING INSTRUCTIONS MANUAL



Quick Links

- [Setting the Wake Time](#)
- [Operating the Clock](#)
- [Setting Clock Time](#)
- [Operating the Radio](#)

Table of Contents

- [FCC Information](#)
- [Battery Back-Up Operation](#)
- [Power Failure Indicator](#)
- [Operating the clock](#)
- [Setting Clock Time](#)
- [Setting the Wake Time](#)
- [Nap Mode](#)
- [Sleep Mode](#)
- [Operating The Radio](#)
- [Canadian Limited Warranty](#)
- [Other ManualsLib Projects](#)



	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
THE LIGHTNING FLASH AND ARROW-HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.	CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.



FCC Information

FCC Information

- This device complies with Part 15 of the FCC Rules.
- Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- In accordance with FCC requirements, changes or modifications not expressly approved by Thomson multimedia Inc. could void the user's authority to operate this product.
- This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.
- If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:
 - Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
 - Move the unit away from the equipment that is receiving interference.
 - Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.
- If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug will not go into the outlet completely, turn the plug over and try to insert it the other way. If it still does not fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.



For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase:

Date of Purchase: _____

Place of Purchase: _____

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

EN



Battery Back-Up Operation

EN

This clock radio is equipped with a memory holding system that can be powered with a 9-volt battery (not included). The power failure protection circuit will not operate unless battery is installed.

When normal household power is interrupted, or AC line cord is unplugged, the battery will power the clock radio to keep track of time and alarm settings programmed into memory. When the battery backup functions, **the digital display will not be backlit**, however, the function of alarm still occurs during the power interruption if remaining battery power is adequate. Normal operation will resume after AC power is restored so you will not have to reset the time or the alarm.

Install battery as follows:

1. Remove battery compartment door (located at the bottom of the radio) by applying thumb pressure to area indicated on battery door and then lift the door out and off the cabinet.
2. Connect a 9-volt battery to the connector plug.
3. Insert battery in the compartment and replace the compartment door.

Power Failure Indicator

When AC power is interrupted (disconnected) for a short period of time, both time and alarm settings will change (unless optional battery is installed). After AC power is restored (reconnected), the Digital Display will blink to indicate that power was interrupted and you should readjust the time and alarm settings.

 


Note: Alkaline (NEDA 1604A / IEC 6LR61) battery is recommended. Carbon Zinc (NEDA 1604 / IEC 6F22) battery may be used but memory holding time will be substantially reduced. Memory holding time for a fresh alkaline battery is approximately 8 hours (if radio or alarm is not operated), which should take care of short, nuisance-type AC power failures. To preserve battery life, the radio should remain plugged into an AC outlet. As batteries get older, their voltage drops and memory may be lost. Be sure to replace the battery periodically. Battery should be removed if the radio will be stored for more than one month. Leaky batteries may badly damage the clock radio.

2



Operating the clock

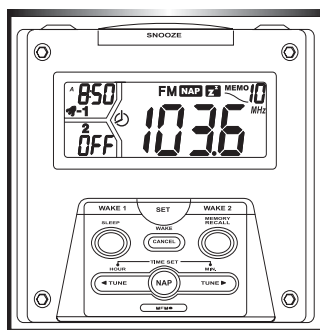

EN

 
Setting Clock Time

Your digital clock operates on a 12-hour standard mechanism. An indicator will be shown beside **AM** or **PM** accordingly.

1. Press the **SET** button until a clock icon is shown on display..
2. Press **◀ TUNE** to set the **hour**, and **TUNE ▶** to set **minute**.

Setting the Wake Time

1. Press the **SET** button once to set **WAKE 1** (1 will flash on display), twice to set **WAKE 2** (2 will flash on display). Press **◀ TUNE** to set the **hour**, and **TUNE ▶** to set **minute**.
3. When wake time is set. You can exit set mode by pressing **SET** button until no flashing sign or clock icon is displayed.



Example 1: WAKE 1 mode setting:
8:50 AM Wake to Alarm

Example 2: WAKE 2 mode setting:
Alarm off

3

Operating the Clock

EN Waking by Selected Source Programme

You may be woken up by music  or alarm .

1. Select an AM or FM station. (refer to "Tuning the Stations")
2. Set wake time (see above direction).
3. Press the **WAKE 1** or **WAKE 2** button to select waking up by music or alarm. An indicator is up next to the selected setting.
4. Adjust the volume by turning **VOLUME**.

Note: When you turn off the alarm  or the music  by pressing **OFF**, the alarm  or the music  will turn on at the same time tomorrow.

Note: The unit equips with **GRAD-U-WAKE** feature, the alarm tone volume will increase gradually to its maximum in about 30 to 45 seconds. (Volume level cannot be adjusted in **GRAD-U-WAKE** mode)

Sleep Mode

In sleep mode, the radio will turn off automatically. Simply:

1. Press **SLEEP** then the time display will exhibit **2:00** and the radio will turn on.
2. While holding **SLEEP**, the sleep time will drop by a 15 minutes step. The time range is from 15 minutes to 2 hours.

3. Release **SLEEP** and the current time will be shown again. The radio is turned on and you may select the station as usual. The radio will turn off when the preset time elapses. If you decide to turn off the radio sooner, press **SNOOZE** or **OFF**.

4. Press **SLEEP** to read the remaining sleep time.

Nap Mode

This function wakes you up after a short period of time. Simply:

1. Press **NAP** and release. The **NAP** indicator will light.
2. While holding **NAP**, the nap time will drop by a 15 minutes step. The time range is from 15 minutes to 2 hours.
3. The clock will be shown after 3 seconds if no button is pressed. The **NAP** indicator will lit up.
4. Press **NAP** once to show time left.

 
Stop the Nap alarm

Press **NAP** or follow "Turning off Alarm".

Notes:

1. Press and hold **NAP** to cancel the nap setting.
2. Only alarm sound can be selected.
3. If the radio is currently on (by pressing **ON/BAND** button), then the radio will be on after **NAP** is pressed.

Operating the radio

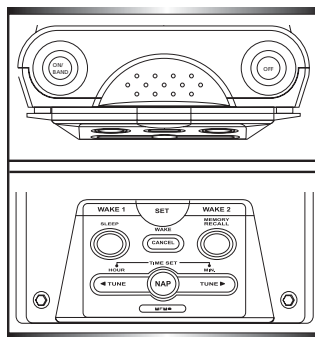

EN

Tuning the Stations

1. Press **ON/BAND** (located on the top of the radio) to turn on the radio.
2. Press **ON/BAND** to change the broadcast band, press the **OFF** button to turn off the radio.
3. Press **◀TUNE** or **TUNE▶** to select a station.
4. If you want to memorize this station, press **MEMO** button once, and press **MEMORY RECALL** button to choose the station number you want to record in, once you choose a number, press **MEMO** again to confirm.
5. If you set the station in the **AL** location, it will be the wake up station of the alarm.

Note: This unit can store up to 11 preset stations, while **AL** location is for the wake up station.

Automatic station search

1. Press **ON/BAND** (located on the top of the radio) to turn on the radio.
2. Press and hold **◀TUNE** or **TUNE▶** for 2 seconds, it will automatically search a station for you.

5

Operating the Clock

EN Turning off Alarm

Silence the alarm momentarily

Press **SNOOZE**. The alarm will sound again when the snooze period is over. (see "Snooze Alarm Operation").

Stop the alarm

Press **OFF**. Then the alarm will be on the following day at the same time.

Disable the alarm permanently

1. Press **CANCEL** button.
2. The **WAKE 1** and **WAKE 2** indicator will be flashing.
3. Press **WAKE 1** or **WAKE 2** button within 3 seconds to deactivate the alarm function permanently, "OFF" will be shown when the above procedures are done.

Tip: You can activate the previously set alarm time by pressing **WAKE 1** or **WAKE 2** button.

Snooze Alarm Operation

This operation allows extra sleep time after the alarm is on. The alarm will be off by pressing **SNOOZE** until the snooze period is over, the default SNOOZE period is 9 minutes.

 
Seconds Time Display

- The unit may display in seconds.
1. The clock should be in normal mode.

2. Press and hold **SNOOZE** to show seconds display.
3. Release **SNOOZE** to return to the hour and minute display.

Changing the lens


The unit has three different lens provided: blue, green and gray. You may change your favourite colour with the hexagon key (size: 3/32") located at the bottom of the unit.

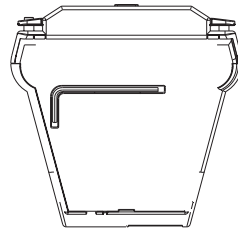

Brightness control

You can adjust the backlight by the **DIMMER** button, there are three modes you may select from:

 - AUTO** - Backlight on for a few seconds whenever a button is pressed.
HIGH - Backlight always high.
LOW - Backlight always low.





Canadian Limited Warranty

EN

Thomson multimedia Ltd. warrants to the purchaser or gift recipient that if any manufacturing defect becomes apparent in this product within 1 year from the original date of purchase, it will be replaced free of charge, including return transportation.

This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries.

Should your product not perform properly during the warranty period, either:

1. Return it to the selling dealer with proof of purchase for replacement,

OR

2. Remove the batteries (where applicable), and pack product complete with accessories in the original carton (or equivalent). Mail prepaid (with proof of purchase) and insured to:

Thomson multimedia Ltd.

6200 Edwards Blvd.,

Mississauga, Ontario,

L5T 2V7

Canada

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson multimedia Inc.

P.O. Box 0944

Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE

NAME OF STORE