

ACTIVITIES

Walkie Talkies have been used for years in situations requiring two way communication. If you were a policeman or fireman you would use a Walkie Talkie to help save lives. Walkie Talkies also make work easier for forest rangers, construction workers, security patrolmen, astronauts and air- plane pilots. You can pretend you are in one of these situations when you play with your Sky Talker. If you were a mountain climber you could call your base for more supplies. Or pretend you are an astronaut and keep in touch with mission control as you orbit around a new planet. You can make up more of your own games or try any of the following activities.



A. Treasure Hunt One person hides something and gives hot and cold clues over the Sky Talker. At the same time, the hunter sends back messages telling location while looking for the treasure. You could send one beep for hot, two beeps for cold, and a long beep for almost there.

B. Reflecting Signals Signal silently by reflecting the sun's light off the signal center label toward your friend. One flash could mean "turn on your Sky Talker." Make other meanings for two or three flashes.

C. What Is This Sound? Send a sound to a friend who tries to guess what it is. Take turns and keep score.

D. Secret Code Use dots and dashes to give a message a simple code for quick transmission. Make some up with your friends like these:

PHRASE

Somebody is coming.
Let's meet at the clubhouse.

SECRET CODE

— •
— • •

E. COMMON COMMUNICATION PHRASES

Phrase	Meaning
Breaker, Breaker	I would like to send a message.
Come on back	Please respond.
10-4	Received message.
10-4 Good Buddy	I received your message and I agree with you.
Stepped On	I didn't hear what you just said.
10-7	I'm turning off my Walkie Talkie.

F. The Sky Talker Walkie Talkie can be used to communicate with any Walkie Talkie on the 49.860 Mega Hertz (MHz) frequency band.

ONE YEAR LIMITED WARRANTY

The Sky Talker Walkie Talkie is warranted by Fisher-Price Toys against defects in material or workmanship for a period of one year from date of purchase. If the unit fails to work properly, when used under normal play conditions, we will repair or replace it free of charge. You must pay the postage in mailing the unit to us. We will pay the cost of returning the repaired or replaced Sky Talker Walkie Talkie to you.

Address: Fisher-Price Toys
Attn: Consumer Affairs
606 Girard Avenue
East Aurora, N.Y. 14052

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

CAUTION: The electronic components are not designed for consumer repair. Evidence of any attempt at consumer repair will void the warranty. Please do not include battery when returning toy.

Call: 1-800-462-7360, in New York State;
1-800-828-7315, Outside New York State,
or mail only via United Parcel Service
or Parcel Post insured. Please telephone
before sending in for repairs.

©1983 Fisher-Price Toys, East Aurora, N.Y. 14052
Division of The Quaker Oats Company

815

Printed in Taiwan, R.O.C.

I.D. 375641


SKY TALKER

by Fisher-Price®

WALKIE-TALKIE OWNER'S MANUAL

READ ALL INSTRUCTIONS BEFORE OPERATING UNIT

- FLEXIBLE ANTENNA**
Remains in extended position.
- SPEAKER/MICROPHONE**
- ON/OFF/VOLUME KNOB**
Turn to Operate
- BELT CLIP**
(on the back)
Clip to Belt or Pocket
- TALK SWITCH**
Push in to send message
Release to receive message
- SEND/RECEIVE INDICATOR**
Orange in the top window indicates that you are sending.
Orange in the bottom window indicates receiving.
- CODE BUTTON**
Push to send coded message.
- SIGNAL CENTER**
Signal with reflected light or send secret messages with the Morse code.

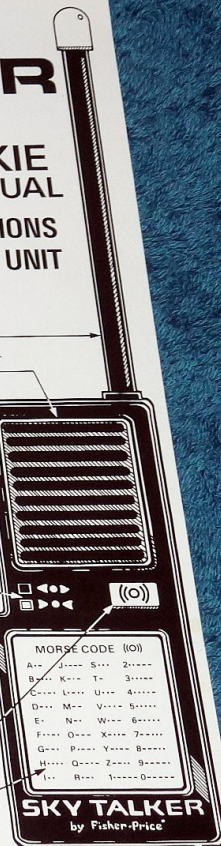


MORSE CODE (OO)

A... J... S... Z...
B... K... T...
C... L... U... A...
D... M... V... G...
E... N... W... F...
H... O... X... T...
I... P... Y... B...
Q... R... S... O...

SKY TALKER
by Fisher-Price®

INSTALL BATTERY


1. Use new 9-volt alkaline battery

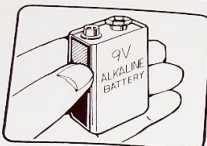


2. Slide door out and lift it up. Note: The door remains attached.



3. Pull the ribbon out. Snap battery to contacts.

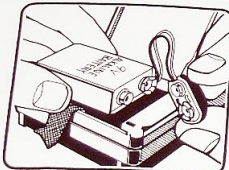

4. Put in the battery snap end first. Be sure battery is on top of the ribbon. Tuck in the wires and the ribbon. Close the door.

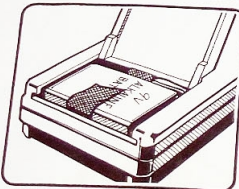

Caution:

Remove the battery if unit is not going to be used for a long period of time. Battery leakage and corrosion can damage the unit.

OPERATE

1. **ON** - Turn knob upward. Increase volume to good listening level.
2. **TALK SWITCH** - Push in the TALK switch to speak, and release it to listen. Talk directly into the speaker/microphone with the unit 2 to 3 inches from your mouth. Say "over" at the end of each message to tell your friend that you are ready to listen. It is important to take turns talking and listening.
3. **SEND CODE** - Use the CODE button to send Morse code message while holding in the TALK switch. Dots (•) and dashes (—) are used to code each letter of the alphabet and each numeral. The Morse code is located on the signal center on the front of the unit. Dots (•) are very short beeps, while dashes (—) are longer beeps. You should write down the coded message before sending or while receiving to make it easier to understand. Also, allow for a short pause between words in order to send a clear message. Practice alone and with friends to get better and faster at sending and receiving messages.

MESSAGE

HELLO TOM

MORSE CODE

H E L L O T O M
 • — — — — —

4. **OFF** - Turn knob downward until you hear a click.

NOTE:

Proper care calls for unit to be kept free from water, sand, and dirt.

TROUBLE SHOOTING

UNIT DOES NOT WORK

- May be due to run down battery.
- TRY A NEW 9-VOLT ALKALINE BATTERY.

INCREASE IN STATIC

- May be due to:
 - Car engines
 - Power lines
 - Fluorescent lights
 - Electric motors
 - Dimmer switches
- CHANGE YOUR LOCATION OR POINT THE ANTENNA IN DIFFERENT DIRECTIONS.

DECREASE IN RANGE

- Unit does not transmit well through:
 - Hills
 - Trees
 - Buildings
 - Crowds of people
- May be due to a run down battery.
- MOVE TO A HIGHER LOCATION OR A MORE OPEN AND FLAT AREA.
- TRY A NEW 9-VOLT ALKALINE BATTERY.

CAUTION

This unit contains no consumer serviceable parts. Do not try to take the unit apart. In case of any difficulty in operation, first try a new 9-volt alkaline battery. If problem persists, please telephone Fisher-Price before sending in for repairs.

In New York State: 1-800-462-7360
 Outside New York State: 1-800-828-7315