

SONY VIDEORECORDER[®] READY REFERENCE AV-3600

Audio dubbing 1 → 2 → 3 → **MANUAL** → 4

CAMERA
LINE
TV

POWER

AUDIO DUB

AUDIO LEVEL
1 2
MANUAL MIN MAX

AUDIO DUB
FORWARD 2 STOP





When the SONY AGC recording is made, skip over the step of the **MANUAL**.

SONY® VIDEORECORDER® READY REFERENCE AV-3600

Recording



CAMERA

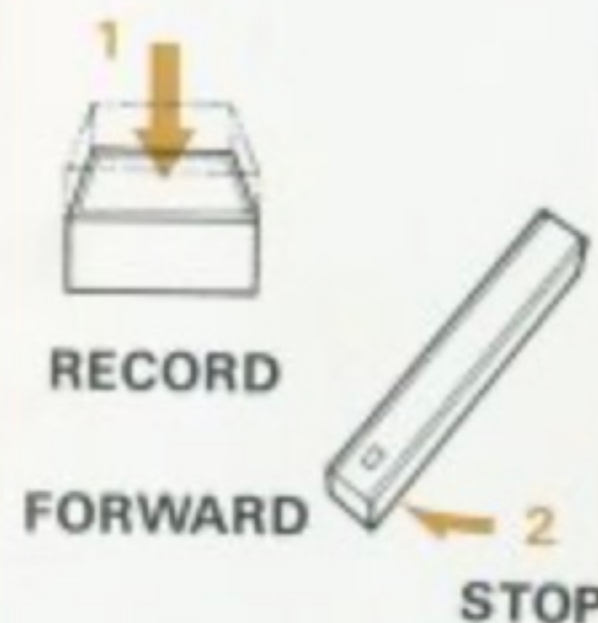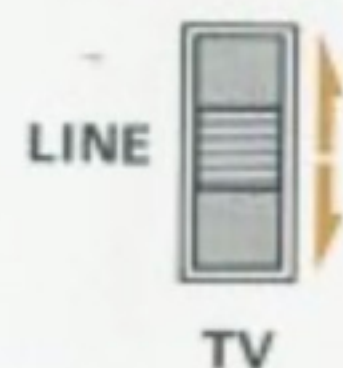

Playback 1 → 3

When the SONY AGC recording is made, skip over the step of the MANUAL.

