


Remote Control

1. turns unit on/off
2. sets the sleep (auto-off) timer function.
3. **V.SELECT** toggles between progressive scan and switching different video output modes.
4. **AV SEL** selects external AV inputs (press repeatedly).
5. **DVD** selects DVD/CD/VCD mode.
6. **TUNER** selects Tuner mode, switches between AM and FM bands.
7. **TITLE (ROTATE)** 1) displays the Title Menu if present on disc (DVD mode only), 2) rotates pictures when playing Picture CDs.
8. **MENU** 1) enters Disc Contents Menu in DVD mode, 2) enters System Setup for SPEAKER, CLOCK or TIMER settings in all other modes.
9. skip backward/forward to the previous or next chapter/track.
10. (Active Navigation keys) advance in indicated directions for making selections in menus, Active Navigation mode, clock and tuner settings.
11. 1) stops playing, 2) selects Mono / Stereo in Tuner mode.
12. starts playing.
13. freezes picture and sound during play.
14. **ZOOM** selects zooming options when playing DVD by pressing repeatedly. (**CLEAR** exits menus and Active Navigation mode)
15. **OK** 1) enters or selects in menu and setup navigation, 2) in Tuner mode, enters preset programming mode or confirms a preset.
16. increases or decreases the volume.
17. start reverse or forward search.
18. **INFO** enters or exits Active Navigation mode.
19. **EXIT** exits menus and Active Navigation mode.

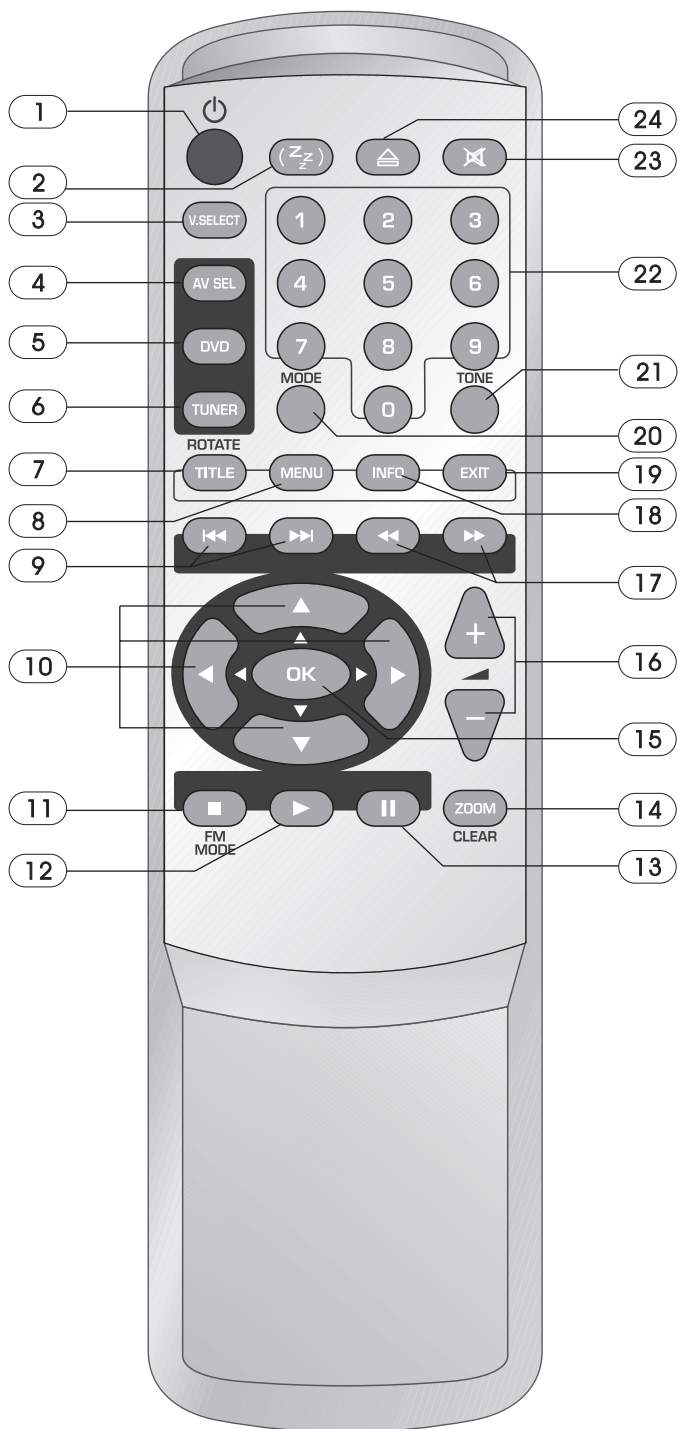

20. **MODE** selects surround modes or soundfield modes.
21. **TONE** selects EQ modes.
22. **0 - 9** (Numeric keys) used for direct selections of title, chapter, track, tuner channel and time input.
23. mutes and unmutes sound output.
24. opens or closes the disc tray.