

[Back](#)



MENU • [Set Up](#) • [Getting Codes from the Remote](#)
[Changing Device Keys](#) • [Volume Punch Through](#)

How to Program your One For All® remote

(Model URC-2030)

Set Up

To set up the remote for your Device(TV,VCR, etc.).

1. Find the 5 digit code for your device.
2. Press the "CH-" key and HOLD it.
3. WHILE HOLDING the "CH-" key, Press the Device(TV,VCR, etc.) key and HOLD IT.
4. The light on the remote will blink twice - release.
5. Enter your five digit code into the remote.
 - VOL+(up) = 1
 - VOL -(down)= 2
 - CH+(up) = 3
 - CH - (down)=4
6. The light on the remote will blink twice.
7. Aim the remote at your Device and press "Power"
8. Your Device will operate with the remote.

[menu](#)

Getting Codes from the Remote

It is easy to get the five-digit code for your Device after your device is set up. To get your Device code:

1. Turn on your Device.
2. Press the "CH-" button and HOLD IT.
3. While STILL HOLDING the "CH-" button press the "Device" button and hold it.
4. You will get two blinks on the remote.
5. Press CH - ,Ch - , CH +,
6. Press the Vol + button and release- count how many blinks- (1st digit)
7. Press the Vol - button and release- count how many blinks- (2nd digit)
8. Press the CH + button and release-count how many blinks (3rd digit)
9. Press the CH - button and release-count how many blinks (4th digit)
10. Press the "CH - " button and release - count how many blinks (5th digit)
11. You now have your 5 digit code.

[menu](#)

Changing Device Keys

If you want, you can program a second device of the same type on one of the other keys.
For instance, a second VCR on the Cable key.

1. Find the code for your second VCR.
2. Turn on your VCR and put in a tape.
3. Press CH- and HOLD IT DOWN.
4. WHILE STILL HOLDING Ch - , hold down the CBL button.
You will see two blinks- release.
5. Press CH - , CH - , VOL +, then VCR.
6. Press CH- and HOLD IT DOWN.
7. WHILE STILL HOLDING Ch - , hold down the CBL button.
You will see two blinks- release.
8. Enter your five-digit VCR code.
9. Aim the SO EASY at your VCR, press VCR, then Play.
10. Your tape should begin to play.
11. Any time you want to use your second VCR, press CBL, and then PWR or Play.

[menu](#)

Volume Punch Through

Many VCRs and Cable Boxes do not have Volume capabilities in them. In order to make using your SO EASY easier, we have included a procedure so you can use your TV volume while in another mode.

1. Press the CH - key and HOLD IT DOWN.
2. WHILE HOLDING DOWN THE CH - KEY, HOLD DOWN the Device(VCR, CBL) Key.
You will see two blinks- release.
3. Press CH - , CH - , VOL -
4. Press the VOL + key.
5. You should be able to move your TV's volume with the Device you selected.

[menu](#)

Back

All Material Copyright © Universal Electronics Inc.

"One For All" copyright Universal Electronics Inc.

Any questions about the products should be directed to help@ueic.com