


Remote

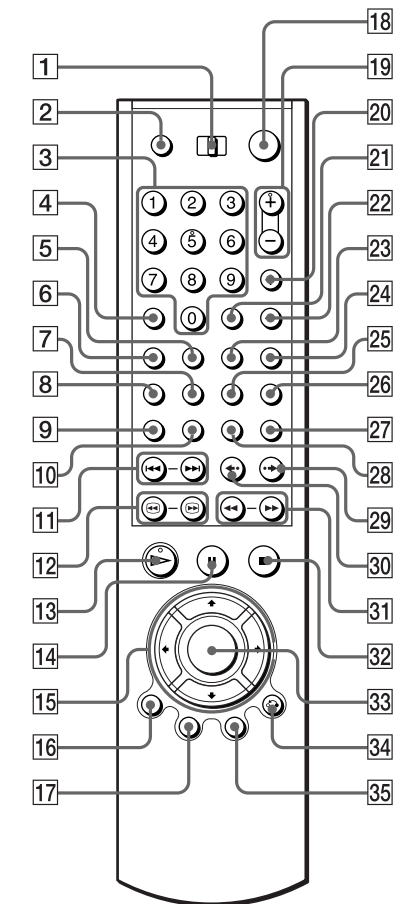

- 1 TV/DISC EXPLORER/DVD switch (51)(84)
- 2 OPEN/CLOSE button (35)
- 3 Number buttons (38)
The number 5 button has a tactile dot.*
- 4 CLEAR button (45)
- 5 SUR (surround) button (70)
- 6 VIDEO CONTROL button (76)
- 7 SUBTITLE button (75)
- 8 AUDIO button (69)
- 9 PICTURE NAVI (picture navigation) button (63)
- 10 REPEAT button (47)
- 11 ◀◀/▶▶ PREV/NEXT (previous/next) buttons (35)

- 12 ◀◀◀/▶▶▶ SEARCH/STEP buttons (60)
- 13 ▷ PLAY button (34)
The ▷ button has a tactile dot.*
- 14 || PAUSE button (35)
- 15 ◀/▶/◀/▶ buttons (38)
- 16 DISPLAY/FILE button (14)(53)
- 17 TOP MENU/EDIT button (38)(55)
- 18 ⏻ (on/standby) button (33)
- 19 VOL (volume) +/- buttons (84)
The + button has a tactile dot.*
- 20 TV/VIDEO/DISC SKIP + button (35)(84)
- 21 ENTER button (84)
- 22 WIDE MODE/DISC SKIP - button (35)(84)
- 23 FOLDER button (50)
- 24 PICTURE MEMORY button (52)
- 25 ANGLE button (74)
- 26 TIME/TEXT button (65)
- 27 SACD/CD (Super Audio CD/CD) button (40)
- 28 SACD MULTI/2CH (Super Audio CD multi/2 channel) button (40)
- 29 •→ INSTANT SEARCH button (35)
- 30 ←• INSTANT REPLAY button (35)
- 31 ◀◀ ◀◀/▶▶ ▶▶ SCAN/SLOW buttons (60)
- 32 ■ STOP button (35)
- 33 ENTER button (38)
- 34 ↶ RETURN button (36) (41) (51)
- 35 MENU/SORT button (38) (42) (58)

* Use the tactile dot as a reference when operating the player.