

Typestar[™] 6

PERSONAL TYPEWRITER

Instructions



English Edition

Canon
ELECTRONIC TYPEWRITERS

FUNCTION INDEX

Page numbers are circled for quick reference.

Centering between margins 26

April 25, 1984 28 Right margin alignment

MARGIN 10

Dear Inquirer:

Thank you for your interest in the newly-announced Canon personal typewriter TYPESTAR 6. This typewriter incorporates professional quality features in addition to a memory of approximately 2,000 characters which allows you to correct mistakes before they reach the paper.

20 Typestyles

29 Indent

Special Features

17 Double-width characters

17 Automatic underlining

15 Line spacing

12 Tab

The decimal tab function allows you to quickly and accurately align lists of numbers like those below:

\$99.95	\$87.00	\$125.98
\$17.01	\$5.25	\$79.95

Decimal tab 30


The block tab function automatically centers lists of alphabetic characters as shown below:

Japan	France	U.S.A.
-------	--------	--------

Centering between tabs 27

This printout was made on a Canon TYPESTAR 6.

On-display correction 22

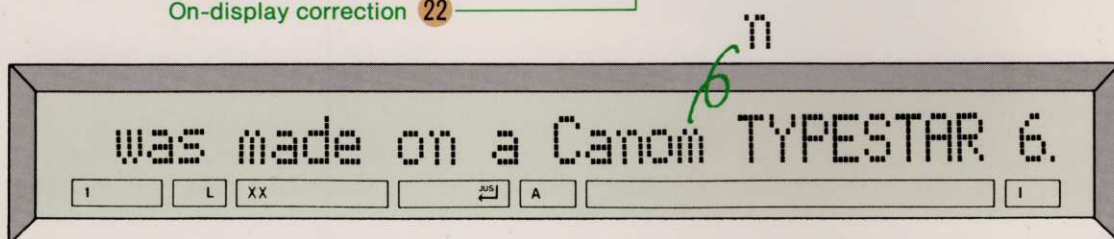

PARTS AND KEY FUNCTIONS

**MARGIN
RELEASE**

MARGIN RELEASE

Releases margins for additional typing or margin resetting.

KB

KEYBOARD SELECTOR

Controls keys for typing alternative character sets.

TEXT

TEXT

Begins/ends the text memory functions: text storage and displaying, printing, or clearing stored texts.

MODE

MODE

Sets typing modes and formats.

TAB

TAB

Moves the carrier to the next tab or decimal tab.

LOCK

SHIFT LOCK

Sets the typewriter for continuous uppercase typing; the indicator lamp lights up.

SHIFT

SHIFT

Types characters in uppercase; also releases the SHIFT LOCK function.

Platen knob

Pitch scale

Performs various automatic functions when pressed after pressing **CODE**.

CODE/CENTER

Mode windows

Display

Typestyle cartridge port

REPEAT

Repeats the last printed or displayed character.

SPACE*

Inserts a space or moves the carrier.




ER/INDENT/DECIMAL TAB/TEXT indicator

Platen knob/Variable line spacer

Keyboard indicator

Display contrast dial

Paper release lever

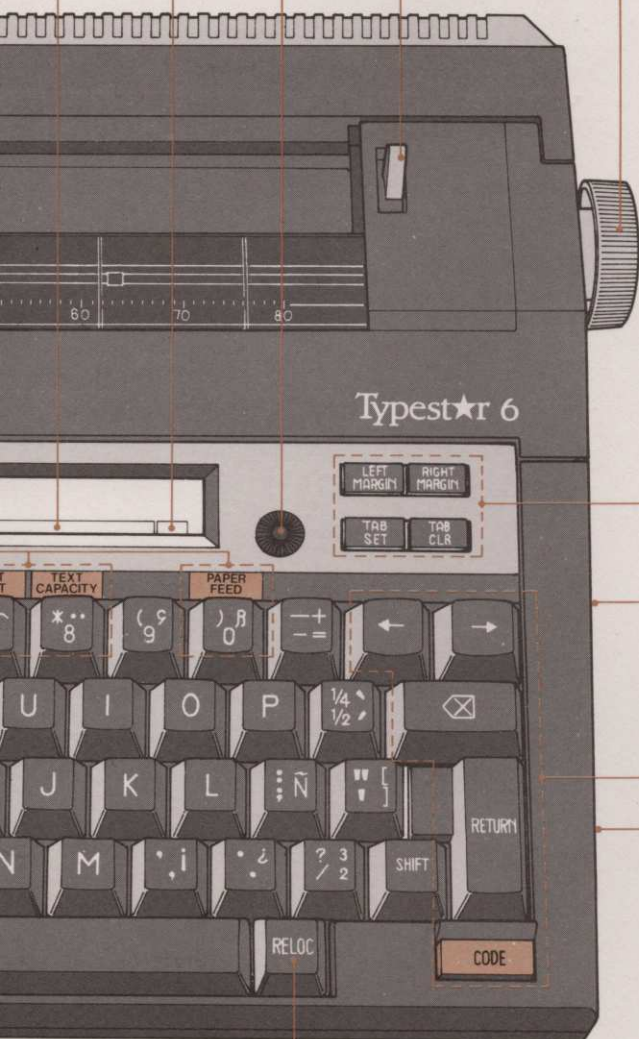

Typest 6

RELOCATE

Relocates the cursor after correction on the display or moves the carrier to the farthest-right entry position on the same line.

LEFT
MARGIN

LEFT MARGIN

- Sets the left margin.
- When a stored text is displayed, moves the cursor word-by-word to the left.

RIGHT
MARGIN

RIGHT MARGIN

- Sets the right margin.
- When a stored text is displayed, moves the cursor word-by-word to the right.

TAB
SET

TAB SET

Sets tabs.

TAB
CLR

TAB CLEAR

Clears tabs and decimal tabs.

Power switch



CURSOR LEFT/ BACK SPACE

Moves the carrier or cursor one space to the left.



CURSOR RIGHT

Moves the cursor one space to the right.



CANCEL

Erases displayed characters.



RETURN

Returns the carrier to the left margin or an indented position on the next line.

CODE

CODE

Together with other keys, performs various automatic functions.

Print density dial

★ Auto repeat key: When pressed continuously, automatically repeats a function.

INTRODUCTION

Thank you for purchasing the compact and convenient TYPESTAR 6 electronic typewriter—yet another technological advance by Canon. To ensure proper performance please read the following instructions carefully before attempting to use your new TYPESTAR 6.

CONTENTS

Part 1

BEFORE USING YOUR TYPESTAR 6

TYPESTAR 6 SPECIAL FEATURES	4
BATTERIES	6
Loading	6
Battery Change Indicator	6
RIBBON CASSETTES	7
Loading	7
Removing	7
POWER SWITCH	8
Keyboard Angle	8
PAPER	9
Automatic Paper Feed	9

Part 2

BASIC TYPING OPERATIONS

MARGINS	10
Determining the carrier/typing position	11
TABS	12
QUICK REFERENCE TO TYPING PROCEDURES	13
MODES	14
Mode Setting	14
Line Spacing Mode	15
Variable line spacing	15
Operation Mode	16
Display control dial	16
Printing Mode	17
Print density dial	17
Carrier Return Mode	18
Right margin alarm	19
Carrier return without line feed	19
Typestyle Mode	20
KEYBOARD (KB) SELECTOR	21
Using the Accent Symbols	21
CORRECTIONS	22
Deletions	22
Insertions	23
HOT ZONE	24
PERMANENT SPACES AND HYPHENS	25
CENTERING BETWEEN MARGINS	26
CENTERING BETWEEN TABS	27
RIGHT MARGIN ALIGNMENT	28
INDENTATION	29
DECIMAL TABS	30

Part 3

TEXT MEMORY

TEXT MEMORY	32
STORING TEXTS	33
Keyboard Lock at the Right Margin	34
Hyphens and Spaces during Text Storage	34
REVIEWING/MODIFYING A STORED TEXT ON THE DISPLAY	35
Moving the Cursor in a Displayed Text	36
Command Symbols	37
PRINTING A STORED TEXT	38
Hyphenation Requests during Printing	40
To Terminate Printing	41
Alarms and Print Halt	41
ADDING/DELETING THE COMMANDS OF AUTOMATIC FUNCTIONS	42
Adding/Deleting an Indent Position	42
Adding/Deleting the Command for Centering between Margins	44
Adding/Deleting the Command for Centering between Tabs	46
Adding/Deleting the Command for Right Margin Alignment	48
Adding/Deleting the Command for Decimal Tab Alignment	50
DISPLAYING THE TEXT MEMORY AVAILABLE FOR STORAGE	52
TEXT MEMORY OVERFLOW	53
CLEARING A STORED TEXT	54

Part 4

APPENDIXES

ALARMS	55
CARING FOR YOUR TYPESTAR 6.....	56
MAINTENANCE	57
OPTIONS	58
Canon AC Adapter AD-6	58
NiCd Battery Pack-50	58
Typestyle Cartridges	59
Carrying Case-50	60
SUPPLIES/SPECIFICATIONS	61

Part 1

BEFORE USING YOUR TYPESTAR 6

TYPESTAR 6 SPECIAL FEATURES


The TYPESTAR 6's thermal-transfer printing makes for inoffensive silent typing, even during meetings.



Compact, lightweight, and cordless, your TYPESTAR 6 can be used with ease in your home, office, car, and a multitude of other locations.



**COURIER
10**

32 × 26 dot printing produces clear, easy-to-read documents and attractive correspondence.

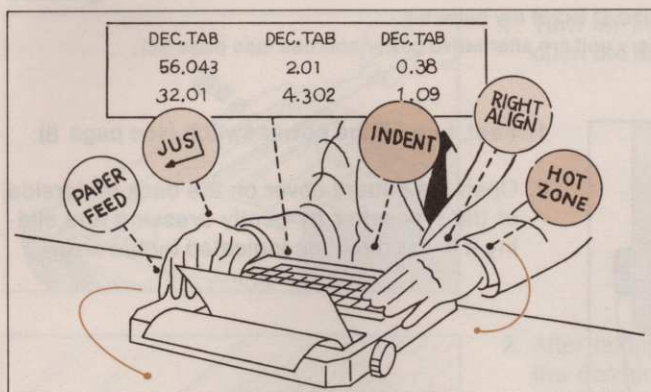


Expert results are easily obtained through automatic functions on a par with office-machine features: automatic paper feed, margin justification, right margin alignment, indentation, decimal tab setting, and hot zone setting.

Your TYPESTAR 6 has a storage capacity of about two thousand characters (A4 or letter-size). Stored texts can be called, corrected, and reprinted at any time.

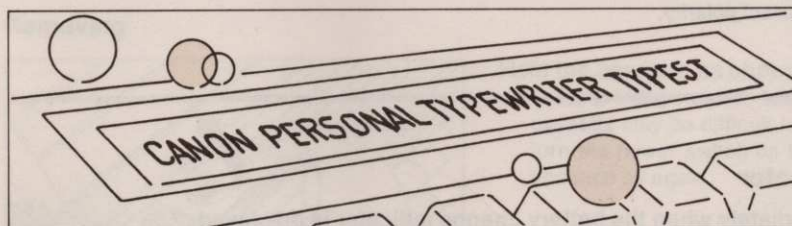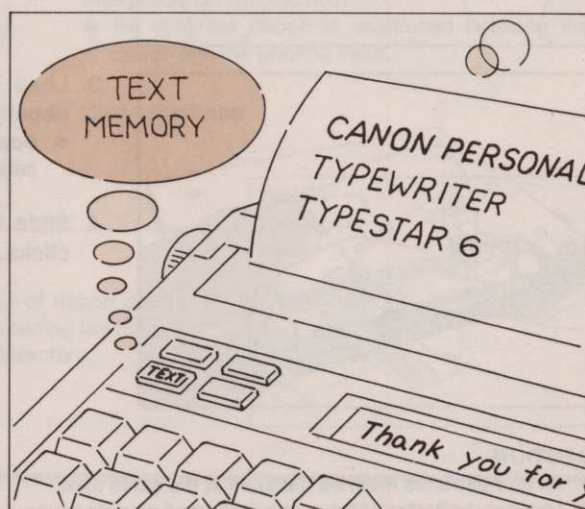

Both current typing and stored texts can be instantly checked and corrected on the 32-digit LCD.

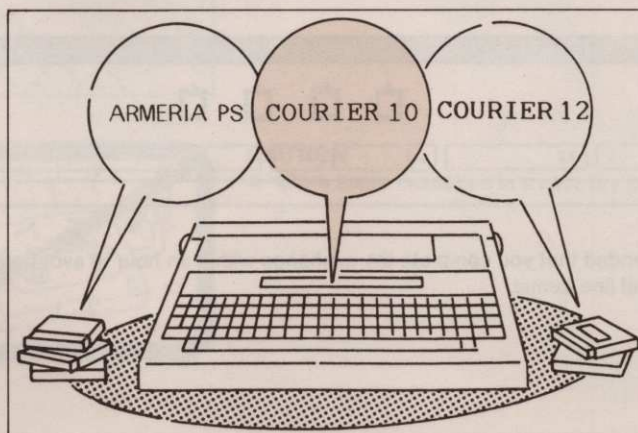



The TYPESTAR 6 can be used with a variety of optional typestyle cartridges.

BATTERIES

The TYPESTAR 6 operates on four size-D (R20) dry batteries.

- An optional AC adapter and NiCd battery unit are alternative power sources (see page 58).

Loading

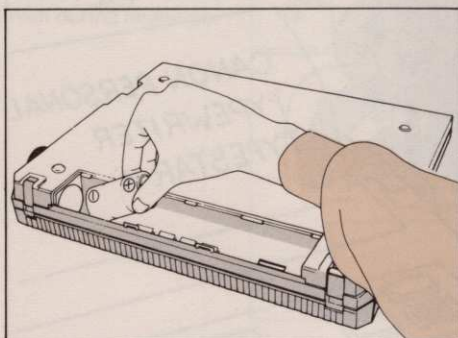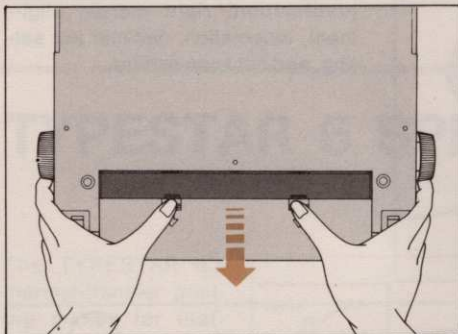


1. First, turn off the power switch (see page 8).
2. Open the battery cover on the back underside of the typewriter by gently pressing and sliding it in the direction indicated by the arrow.
3. Load four size-D (R20) batteries from the negative pole side as shown in the diagram.
 - See the battery case for the proper polarity setting.
4. Slide the battery cover back in place until it clicks.

CAUTION

- All four batteries must be replaced at the same time.
- Use only batteries of the same rating and manufacturer.
- Load batteries in the correct polarity.

Battery Change Indicator


Replace batteries immediately when the battery change indicator is displayed.

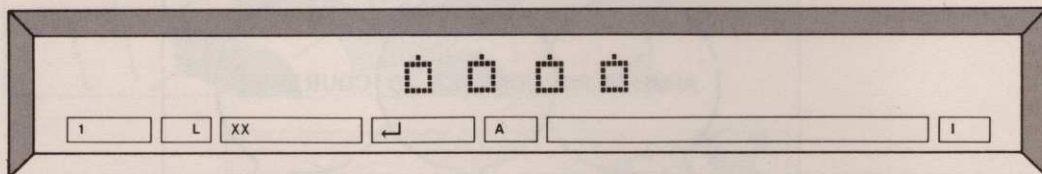


- It is recommended that you complete the exchange within an hour to avoid erasing the contents of the stored text and line format.

RIBBON CASSETTES

Loading

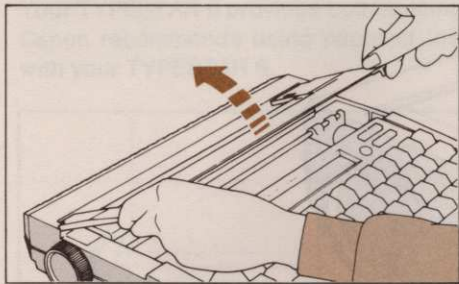


1. Turn off the power switch (see page 8), then open the hood.

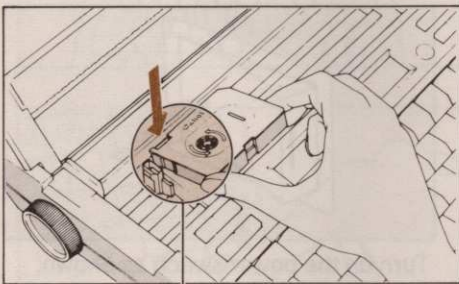


2. After taking up any slack in the ribbon, press the cassette gently downwards until it clicks into place on the carrier.
 - Be sure the ribbon is positioned between the platen and the printing head.

3. Close the hood.

- To prevent the typewriter from running out of ribbon during typing, check the ribbon for its residual by opening the hood.
- One ribbon cassette types about 32,000 characters.

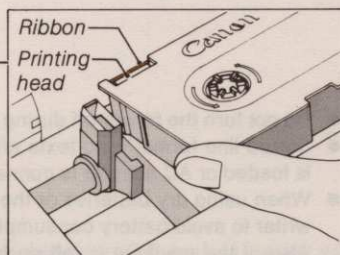


Removing

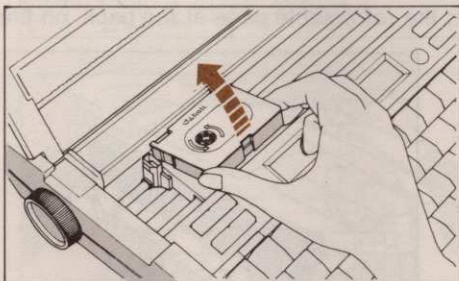

Hold the cassette as shown and lift up.

- If the printing head is too close to the platen, the cassette may be difficult to remove. In such a case, turn the power switch on to reset the printing head and then off again.


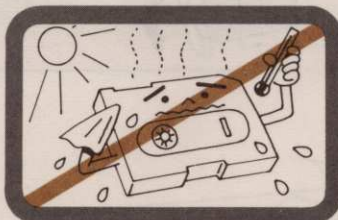


CAUTION

- Store spare cassettes in a cool, dry place.

POWER SWITCH

8

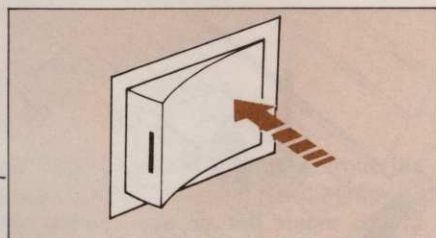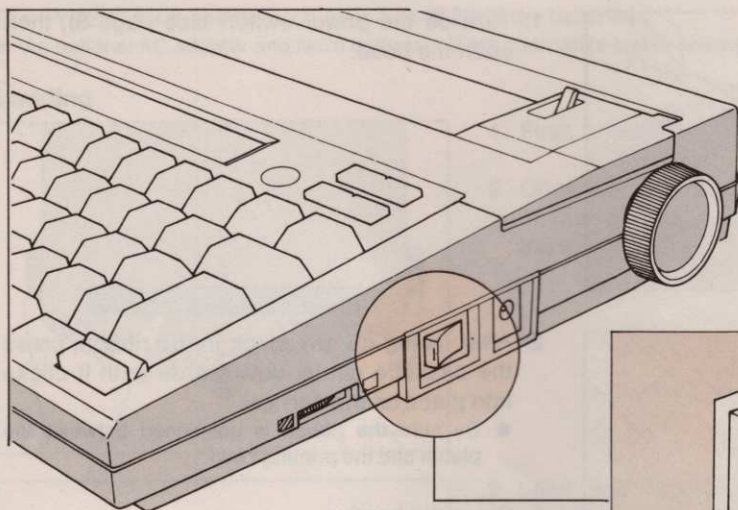


Turn on the power switch as shown. The carrier will return to the left margin.

- Do not turn the power off during printing.
 - Stored line format* and texts are all retained when the power is off if dry batteries or NiCd battery unit is loaded or AC adapter is connected.
 - When using dry batteries or the NiCd battery unit, be sure to switch off the power after using the typewriter to avoid battery consumption.
- Also, if the machine is left on for an extended period of time, the line format and text may be erased and battery leakage may occur.

* The line format consists of the margins, tabs, decimal tabs and hot zone setting.


Keyboard Angle

You can change the keyboard angle by folding down the retractable pegs at the back, on the underside of the typewriter.

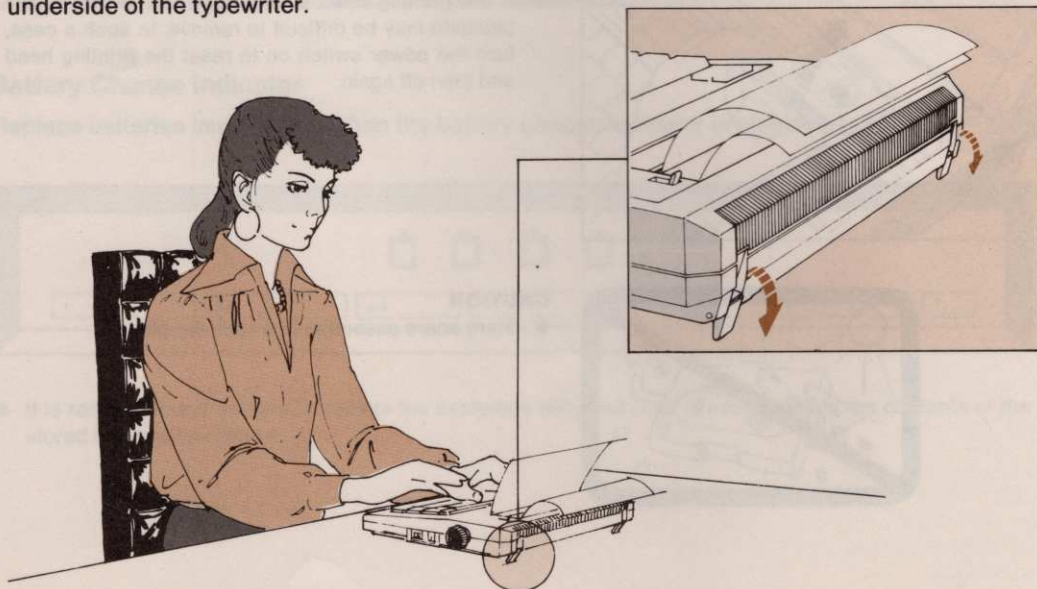


PAPER

Your TYPESTAR 6 provides both automatic and manual paper-feed functions. Canon recommends using paper of the same thickness and texture as the sample included with your TYPESTAR 6.

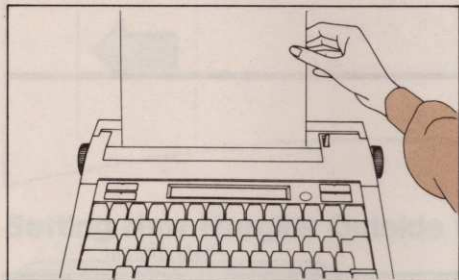


Automatic Paper Feed

1. Insert one sheet as shown.

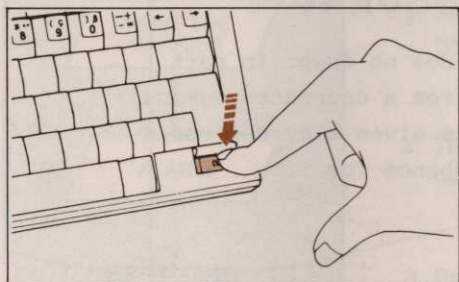


2. Press **CODE**.

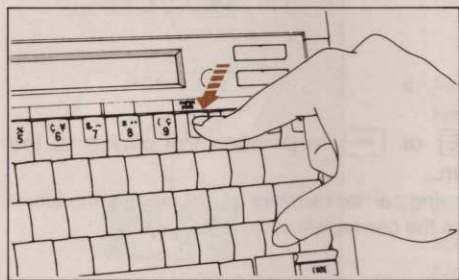


3. Press .

4. About one inch (approx. 2.5 cm) of paper will automatically be fed into the typewriter.

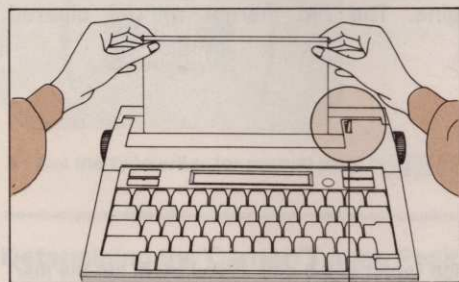



5. Pull the paper release lever forward to adjust the paper. Then push the lever back to its original position.

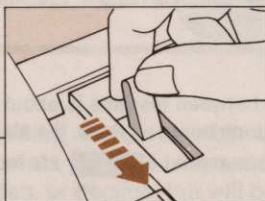

Part 2


BASIC TYPING OPERATIONS

MARGINS

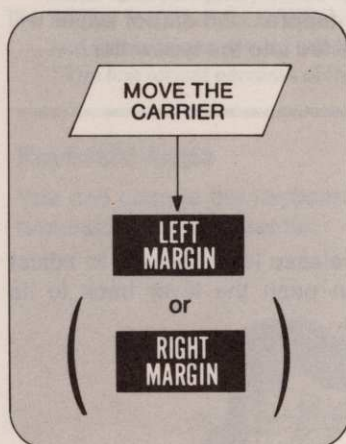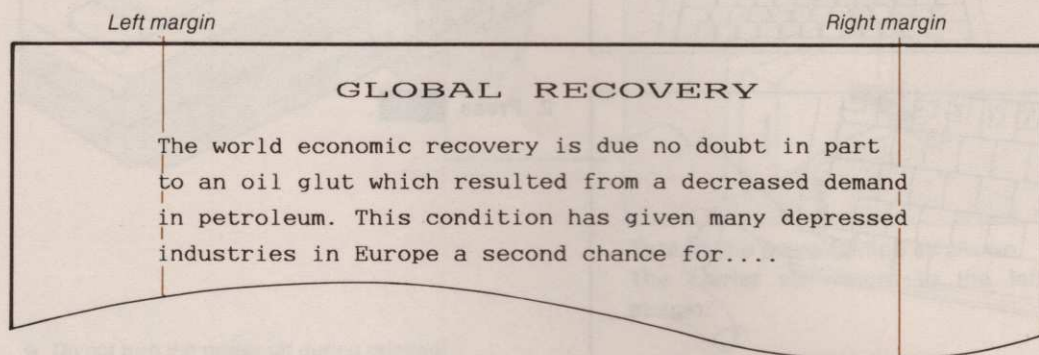


1. Press **SPACE** or **←** to position the carrier at the required margin.
 - When the moving carrier reaches an old margin, the alarm will sound and the carrier will stop.
2. Press **LEFT MARGIN** or **RIGHT MARGIN** to set respective margins. The old margin will be cleared automatically.

- The minimum distance between margins is about one inch (approx. 2.5 cm). If you try to set the margins with less than one inch between them, the alarm will sound.
- Set the typewriter for normal print (**xx**) to facilitate margin setting (see page 14).

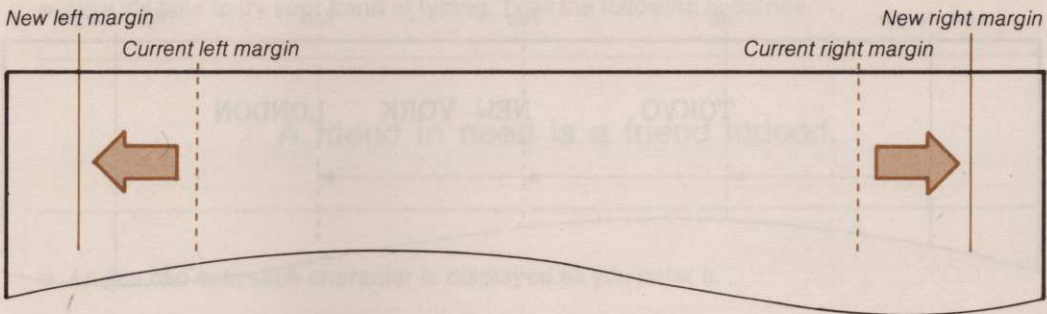


Setting New Margins Outside the Current Margins

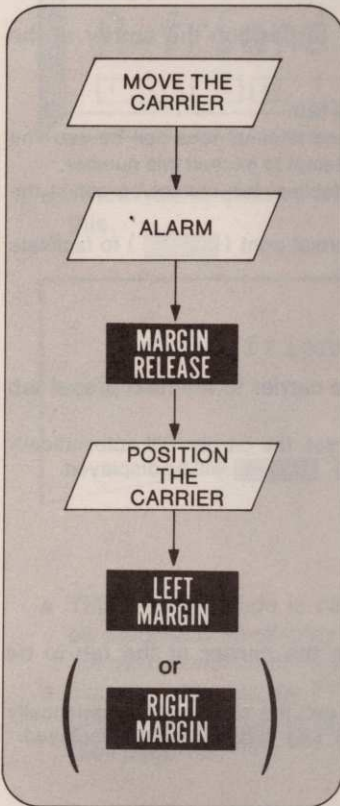

1. Press **SPACE** or **←** to move the carrier toward the required margin.
2. The alarm will sound and the carrier will stop at the current margin.
3. Press **MARGIN RELEASE** to clear the current margin.
4. Press **SPACE** or **←** to position the carrier at the required margin.
5. Press **LEFT MARGIN** or **RIGHT MARGIN** to set respective margins. The old margin setting will be cleared automatically.


- Set the typewriter for normal print (**xx**) to facilitate margin setting (see page 14).

Determining the Carrier/Typing Position

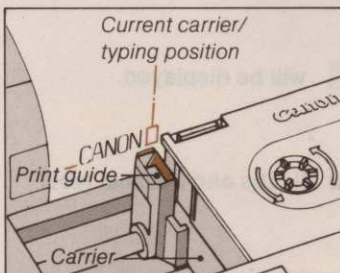


- When setting margins, tabs and decimal tabs, the arrow points to the current carrier position. The margin, tab, or decimal tab will be set at this position.
- During typing, the arrow points to the center of the next character to be typed.
- For additional typing on the previous line, refer to the figure on the left and adjust the horizontal position.

TABS

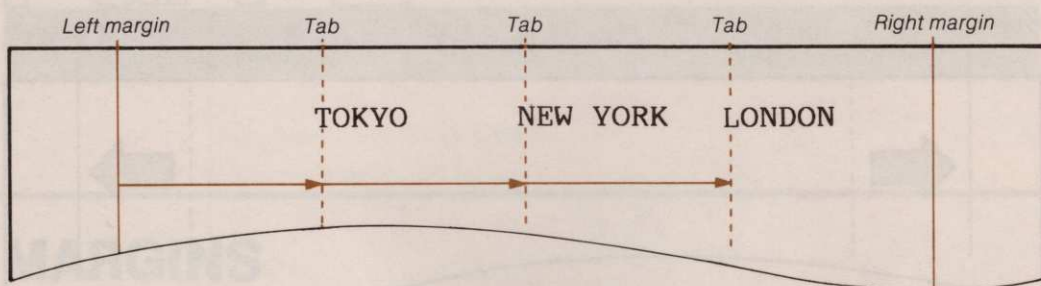


Setting Tabs

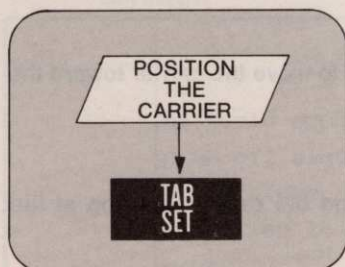


1. Press **SPACE** or **←** to position the carrier at the required tab.
2. Press **TAB SET** to set a tab.
 - A total of sixteen tabs and decimal tabs can be set. The alarm will sound if you attempt to exceed this number.
 - An ordinary tab and a decimal tab cannot be set at the same position.
 - Set the typewriter for normal print (**XX**) to facilitate tab setting (see page 14).

Executing Tabs

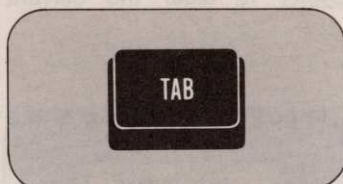


1. Press **TAB** to move the carrier to the next preset tab or to the right margin.
 - When decimal tabs are set, the carrier will automatically stop at the decimal tab(s); **DECTAB** will be displayed.

Clearing Specific Tabs

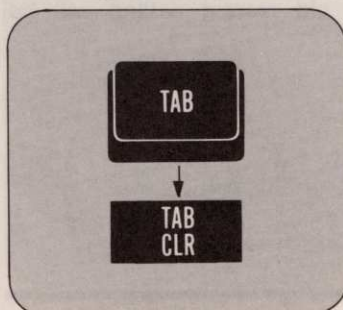

1. Press **TAB** to position the carrier at the tab to be cleared.
 - When decimal tabs are set, the carrier will automatically stop at the decimal tab(s), and **DECTAB** will be displayed.
2. Press **TAB CLR** to clear the tab.

Clearing All Tabs

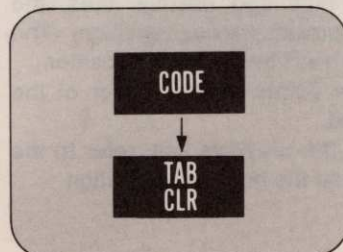


1. Press **CODE**. **CODE** will be displayed.
2. Press **TAB CLR** to clear all tabs and decimal tabs.

QUICK REFERENCE TO TYPING PROCEDURES


- Now it's time to try your hand at typing. Type the following sentence:

A friend in need is a friend indeed.

- As you can see, each character is displayed as you enter it.

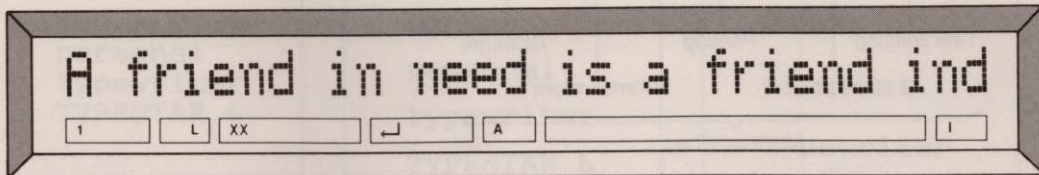


- When you've entered the entire sentence, press **RETURN** to print it. It should look like this.

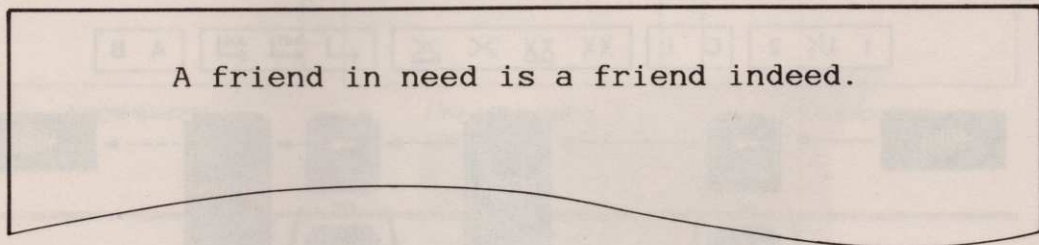

- This printing mode is called line-by-line mode (see page 16). Since the TYPESTAR 6 has an automatic on-display correction function (see pages 22 and 23), you'll find this method the most convenient for everyday typing.
- You can also use the TYPESTAR 6 as a conventional typewriter, in which each character is printed as the key is pressed. This printing mode is called character-by-character mode (see page 16).


MODES

The TYPESTAR 6 offers a variety of automatic functions to accommodate your typing needs. The illustration below shows the positioning of the mode windows on the display.

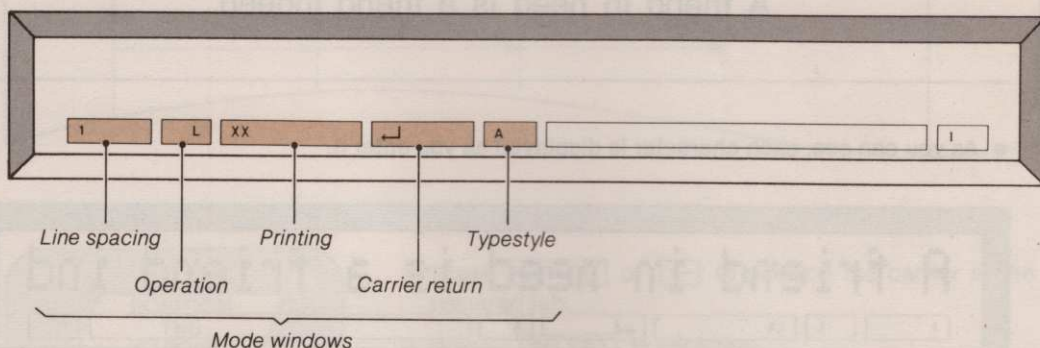

Mode Setting



The settings displayed in the mode windows during typing are "current." To set your choice of modes simply follow the operations described below.

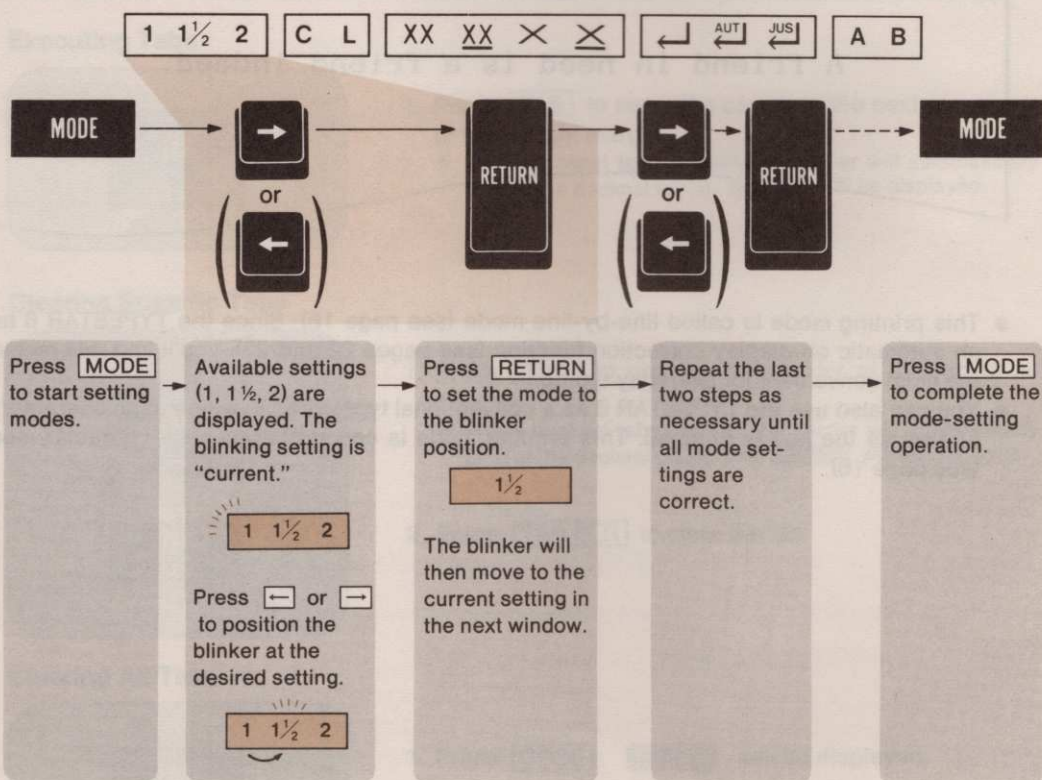

- The typestyle selection, either A or B, is available only when an optional typestyle cartridge is used. If an optional cartridge is not being used, B is not displayed.

Line Spacing Mode

Three different automatic line spacing settings are available:

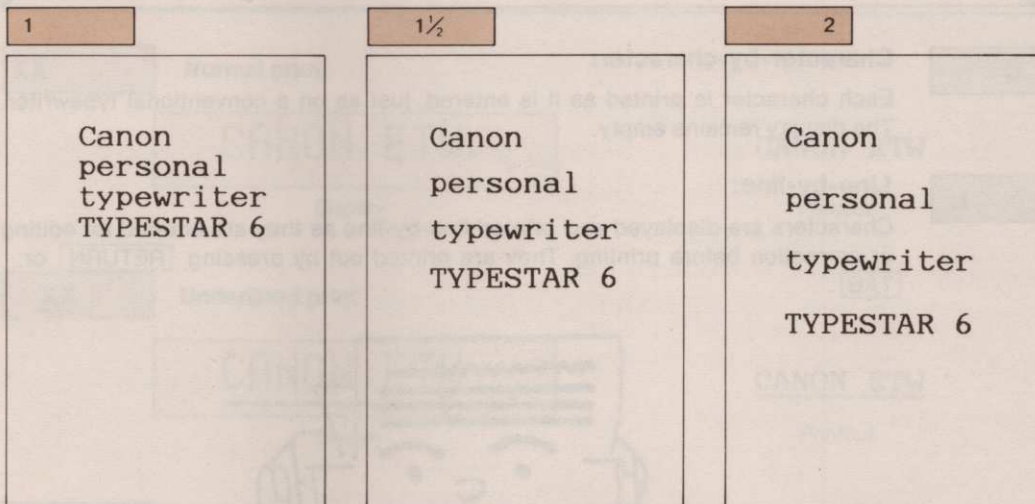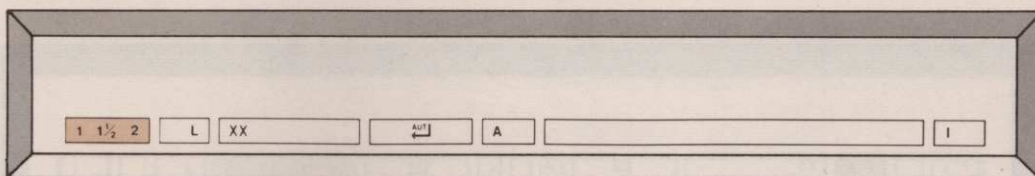


Single spacing

*Line-and-a-half
spacing*

Double spacing


Variable Line Spacing

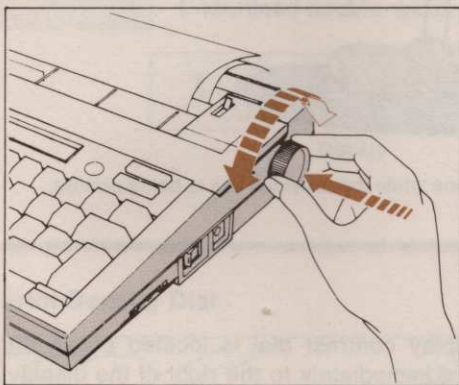

Adjust your paper to a different typing line by pushing the right platen in while turning it either clockwise or counterclockwise. This feature repositions the paper for additional typing or for typing preset forms.

Operation Mode

The TYPESTAR 6 has two typing modes: "C" for character-by-character typing and "L" for line-by-line typing.

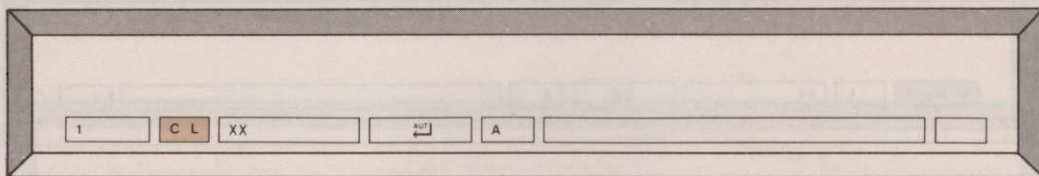

C


Character-by-character:

Each character is printed as it is entered, just as on a conventional typewriter. The display remains empty.

L


Line-by-line:

Characters are displayed and printed line-by-line as they are entered for editing or correction before printing. They are printed out by pressing **RETURN** or **TAB**.

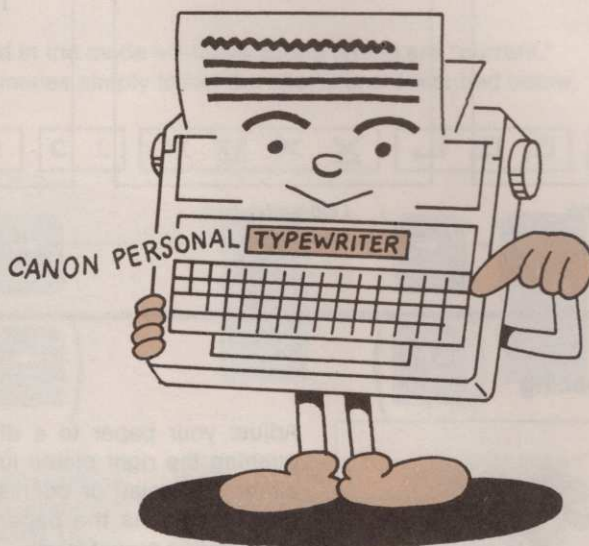

- For speedy typing you can type characters on the next line while the previous line is being printed.


Display Contrast Dial

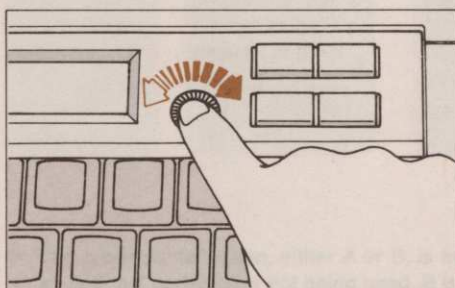

The display contrast dial is located above the keyboard immediately to the right of the display. Turn this dial clockwise for higher contrast or counterclockwise for lower contrast.


Printing Mode

The TYPESTAR 6's four printing modes are normal, normal with automatic underlining, double-width, and double-width with automatic underlining.

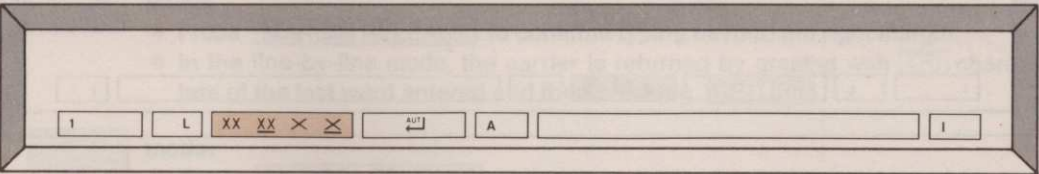

XX

 Normal print




Display

CANON ETW

Printout

XX

 Underlined print




Display

CANON ETW

Printout

X

 Double-width print




Display

CANON ETW

Printout

X

 Underlined double-width print




Display

CANON ETW

Printout



Print Density Dial

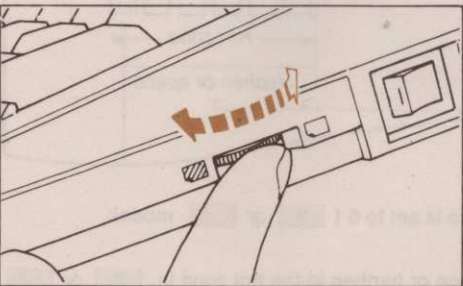

The print density dial is located on the right side of the typewriter near the front. Turn this dial clockwise for darker printout or counterclockwise for lighter printout.


Carrier Return Mode

 There are three carrier return modes: manual, automatic, and margin justification.

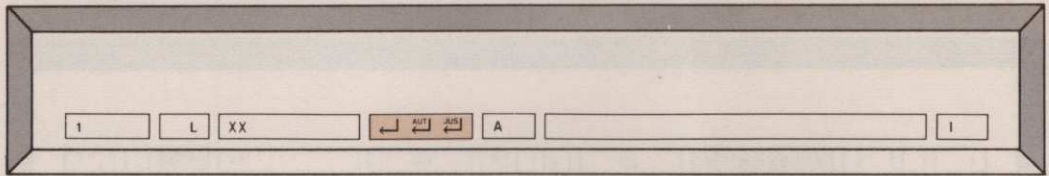


Manual carrier return:

 Press **RETURN** for carrier return.



Automatic carrier return:

 
The carrier returns automatically when a space or hyphen is typed in the hot zone.*



Margin justification:

The text is automatically spaced so that the last word typed on each line is aligned on the right margin when a hyphen or space is entered in the hot zone.* Although the typewriter is set for character-by-character printing (**C**), the characters entered are displayed and printed line-by-line.


Example:

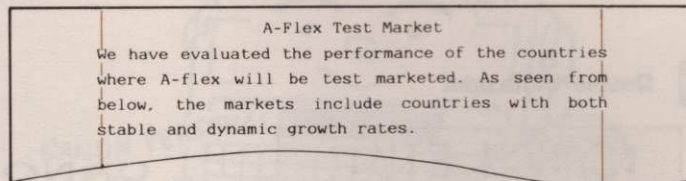

- For best results with justified printouts, use a hot zone setting of 4 or 5.

* Hot Zone


The hot zone lies immediately to the left of the right margin; it can be set to contain up to nine (9) characters. When the carrier enters the hot zone, the alarm sounds, alerting the typist that the character just entered is within a certain distance of the right margin. (See page 24.)

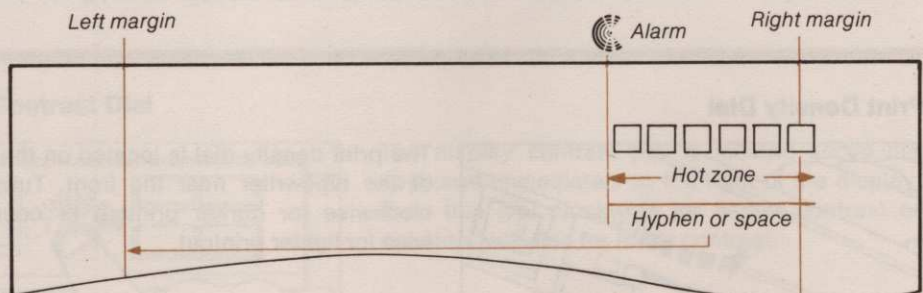

In the illustration above, the hot zone is set to 5 (**AUT** or **JUS** mode).


- For continued typing after entering a space or hyphen in the hot zone in **AUT** or **JUS** mode, use the permanent space or hyphen function (see page 25).

 Right Margin Alarm




mode:

 - Press **MARGIN RELEASE** to continue typing beyond the right margin.
- In the line-by-line mode, the carrier is returned by erasing with  characters of the last word entered and then pressing **RETURN**.



mode:

 - Press **MARGIN RELEASE** to continue typing beyond the right margin, and then type a space or hyphen to return the carrier.
- In the line-by-line mode, the carrier is returned by erasing with  characters of the last word entered and then typing a space or hyphen.




mode:

- The carrier is returned by erasing with  characters of the last word entered and then typing a space or hyphen.

Carrier Return without Line Feed

This function returns the carrier to the left margin without line feeding and is useful for typing on the same line after margins or tabs are set.

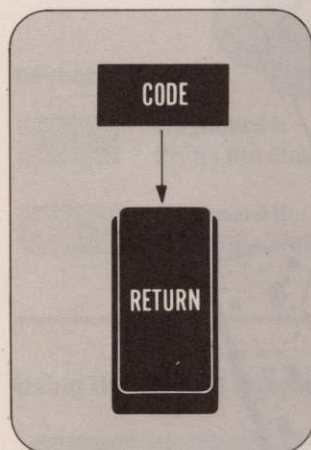


1. Press **CODE** . **CODE** will be displayed.

2. Press **RETURN** . The carrier will return to the left margin without line feeding.

Typestyle Mode

The TYPESTAR 6's built-in typestyle is COURIER 10. A variety of other optional typestyle cartridges are available.

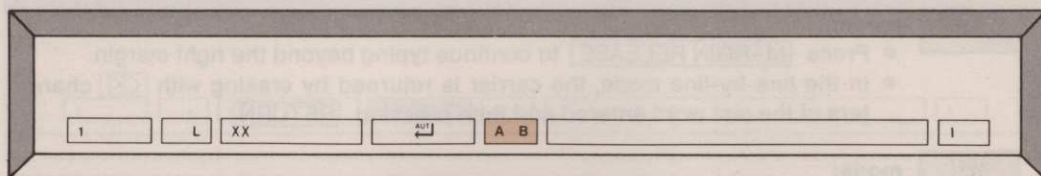

A : COURIER 10

B : A typestyle corresponding to the typestyle cartridge installed.


- The typestyle mode cannot be set to **B** unless an optional typestyle cartridge is installed.
- A stored text will be printed in the typestyle corresponding to the one installed at the time of recall.
If no optional typestyle cartridge is installed, the recalled text will be printed in COURIER 10.




KEYBOARD (KB) SELECTOR

KB


This selector affects only those keys that have three or four different characters on the keytop.

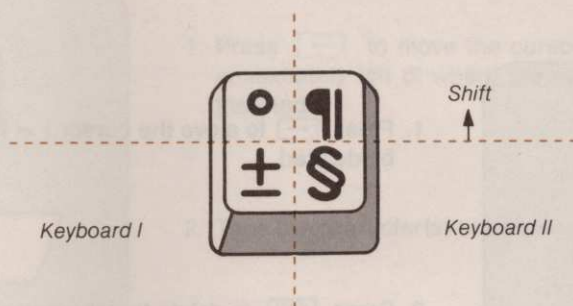

To alternate character sets, simply press **KB**. The setting will then be displayed on the keyboard indicator.

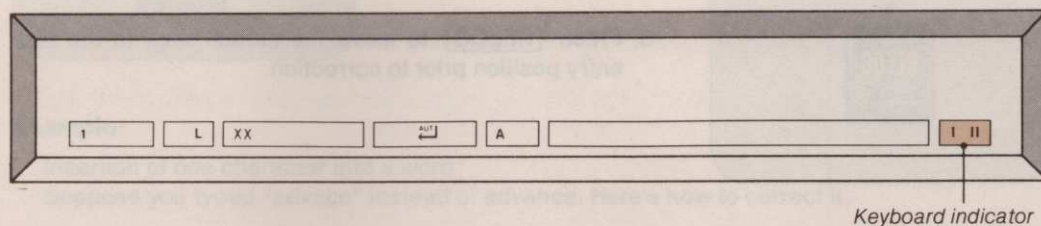


Keyboard Indicator

 

Keyboard I:

 
Prints the character(s) on the left side of the keytop.



Keyboard II:

Prints the character(s) on the right side of the keytop.

Using the Accent Symbols (◊, ◆, ^, ••)

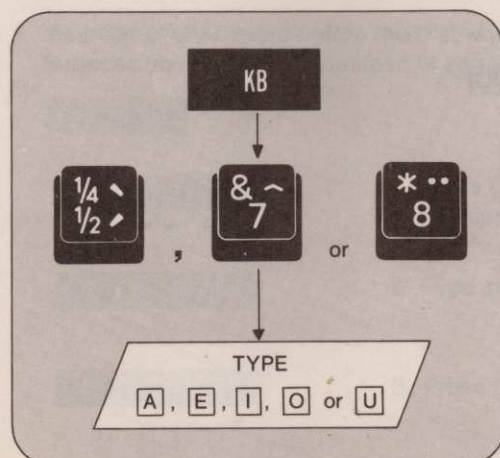

1. First, press **KB** to select keyboard II.

2. Press **1/4 1/2**, **& ^ 7** or *** •• 8**.


- Neither carrier nor cursor will move.

3. Type an alphabetic key.

CORRECTIONS

You can correct texts on the display before they are printed if the TYPESTAR 6 is set for line-by-line () typing.

Deletions

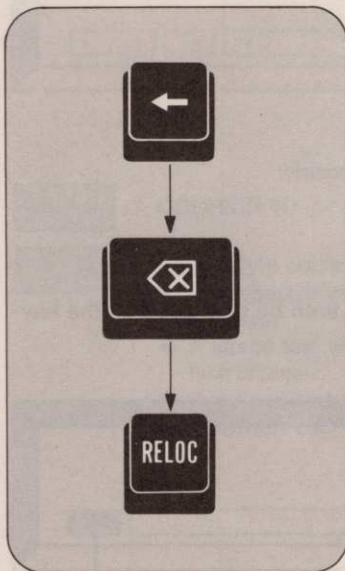

1. Press  to move the cursor () to the character to be deleted.
2. Press  to delete the character.
 - You can also delete an entire word, phrase, or line by pressing  and then .
3. Press  to move the cursor back to the last entry position prior to correction.

Example:

Suppose you typed "advaice" instead of advice. Here's how to correct it.

a d v a i c e

a d v a i c e

1. Press  three times.


a d v i c e

2. Press .

a d v i c e

3. Press .

Insertions

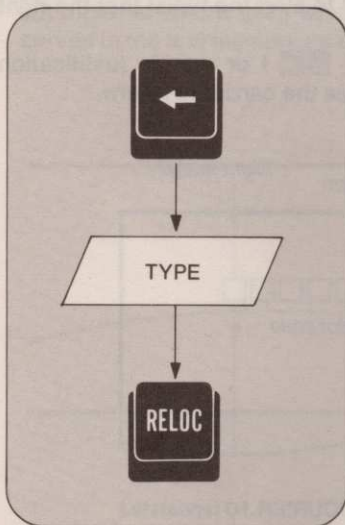

1. Press to move the cursor () to the position immediately left of where the new character(s) will be inserted.
2. Type the character(s) to be inserted.
3. Press to return the cursor to the last entry position prior to correction.

Example:

1. Insertion of one character into a word

Suppose you typed "advace" instead of advance. Here's how to correct it.

a d v a c e

a d v a c e

1. Press twice.

a d v a n c e

2. Type an .

a d v a n c e

3. Press .

2. Insertion of characters before the first word on the display.

Suppose you typed "just" instead of adjust. Here's how to correct it.

j u s t

j u s t

1. Press four times.
The cursor will disappear from the display.

a d j u s t

2. Type an and then .


a d j u s t

3. Press .

HOT ZONE


The hot zone has the following functions:


1. When the carrier reaches the hot zone, the alarm will sound to alert the typist that the right margin is within a certain distance.
2. When the typewriter is set for automatic carrier return () or margin justification (), typing a space or hyphen within the hot zone causes the carrier to return.

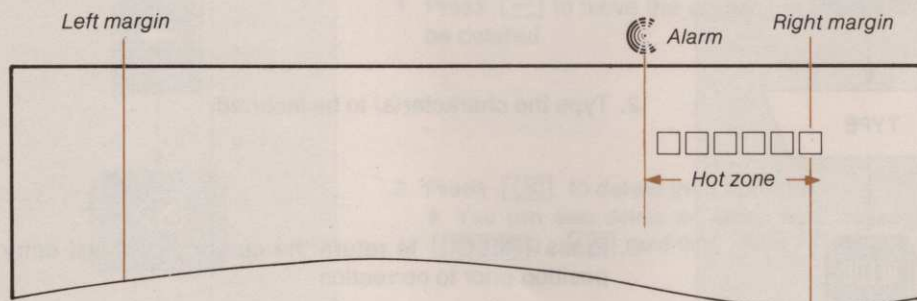


(The above illustration shows a hot zone setting of five characters for COURIER 10 typestyle.)

 The hot zone can be set to contain up to nine characters. Settings remain unchanged regardless of whether the power is turned off and then back on again.

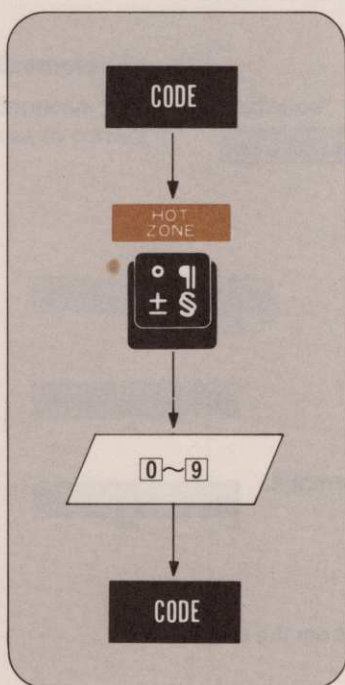

 1. Press  .  will be displayed.




2. Press  . The numbers will be displayed. The underlined number indicates the current number of characters contained in the hot zone.
3. Type your desired number from 0 through 9; the underlining will move to the entered number, making a new setting for the hot zone.
4. Press  to complete setting.


- For best results with justified printouts, use a hot zone setting of 4 or 5.

PERMANENT SPACES AND HYPHENS

This function allows you to enter a hyphen or space in the hot zone and continue typing without a carrier return even when set at  or . Also, hyphens or spaces may be preserved in the text memory as entered for proper punctuation, grammar, etc. in later printouts.

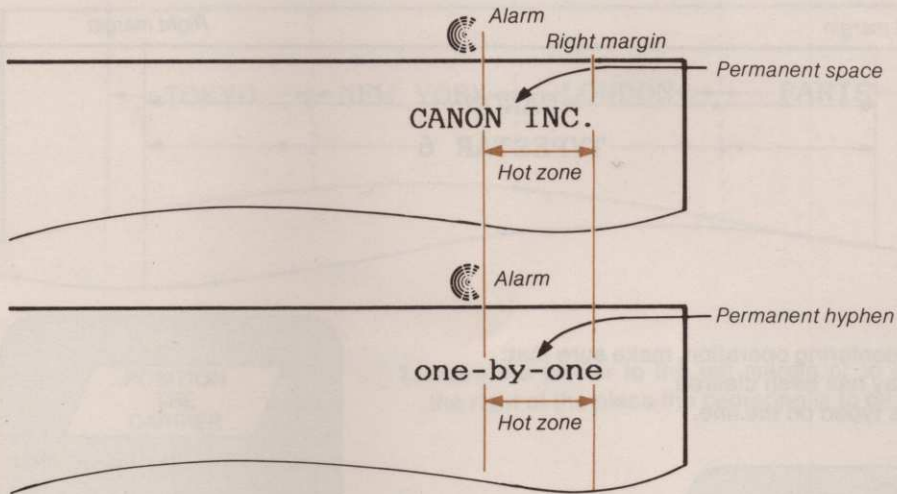

Permanent Space

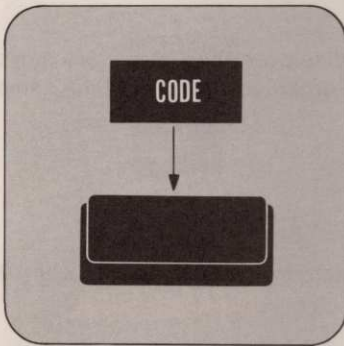


1. Press .  will be displayed.

2. Press  to move the carrier one space or insert a space into the display without a carrier return.

- A permanent space is represented by " " on the display.

Permanent Hyphen

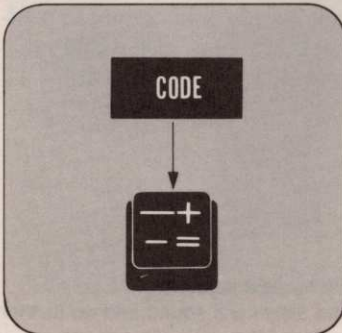

1. Press .  will be displayed.

2. Press  to print or display a hyphen without a carrier return.


- The permanent hyphen will be represented by "-" on the display.

- For further details on use of permanent hyphens and permanent spaces with text memory, see Hyphens and Spaces during Text Storage (page 34).

CENTERING BETWEEN MARGINS


By a simple key operation, the TYPESTAR 6 can automatically center texts between the left and right margins. This feature is especially useful for centering a subject or title.

(When **INDENT** is displayed, centering is performed between an indented position and the right margin.)

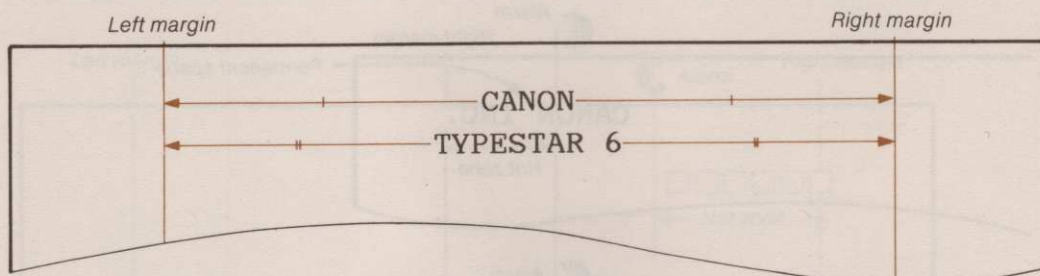

Prior to any centering operation, make sure that:

- The display has been cleared.
- Nothing is typed on the line.

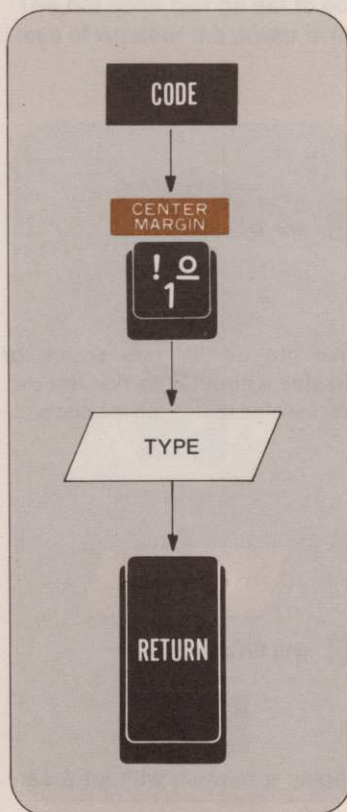

1. Press **CODE** . **CODE** will be displayed.

2. Press **1** . **CENTER** is displayed. The carrier will move to the left margin or an indented position on the same line.

3. Enter the text you wish to center, and it will be displayed.

4. Press **RETURN** to center and print your text. The carrier will return to the left margin or an indented position on the next typing line; the display will be cleared.



- For additional centering operations, start from step 1.

- To cancel a centering operation, press **CODE** and **1** again before the text is printed.
- When the length of an entered text exceeds the allotted distance, the alarm will sound and no further entry will be possible.

CENTERING BETWEEN TABS

The TYPESTAR 6 can automatically center texts between tabs or between a tab and either margin.

You will find this function especially useful in typing headings of a table.

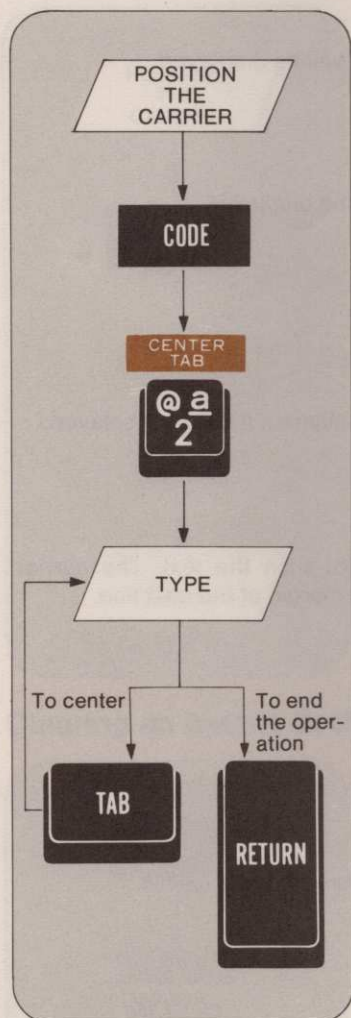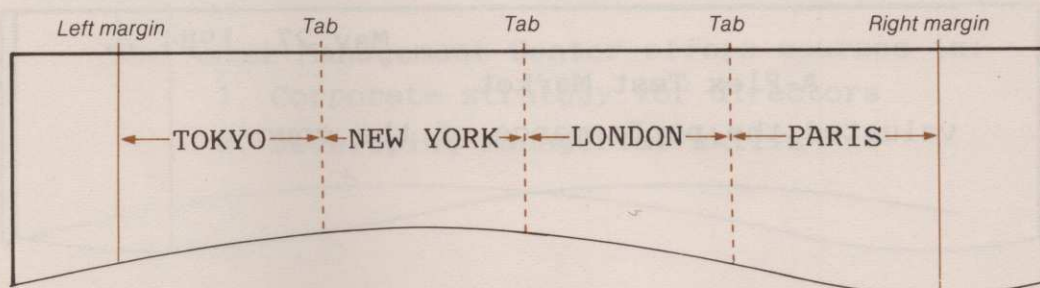

1. Move the carrier to the left margin or to a tab stop to the right of the place the centering is to be performed.

2. Press **CODE**. **CODE** will be displayed.

3. Press **2**. **CENTER** will be displayed.

4. Enter the text to be centered; it will appear on the display.

5. Press **TAB** to center and print the text. The carrier will move to the next tab.



- To repeat centering between tabs on the same line, repeat steps 4 and 5.

After **RETURN** has been pressed, the text will be centered and printed; the carrier will then return. For an additional centering operation on the next line, begin again from step 1.

- To cancel a centering operation between tabs, press **CODE** and **2** again before the text is printed.
- When the length of an entered text exceeds the allotted distance, the alarm will sound and no further entry will be possible.

RIGHT MARGIN ALIGNMENT

This function aligns the final character of an entered text with the right margin and thus is useful in typing dates, complimentary closes, etc.

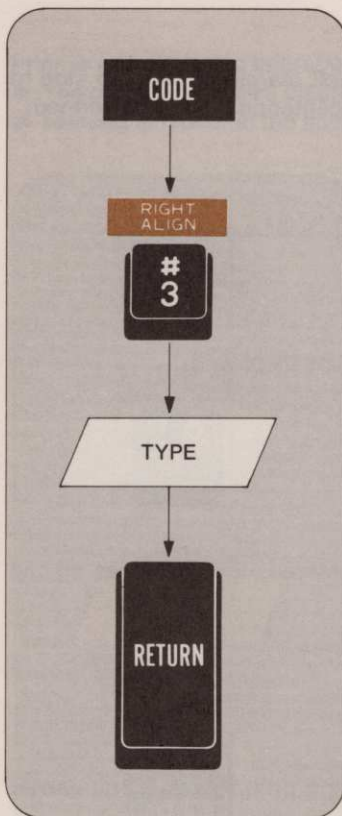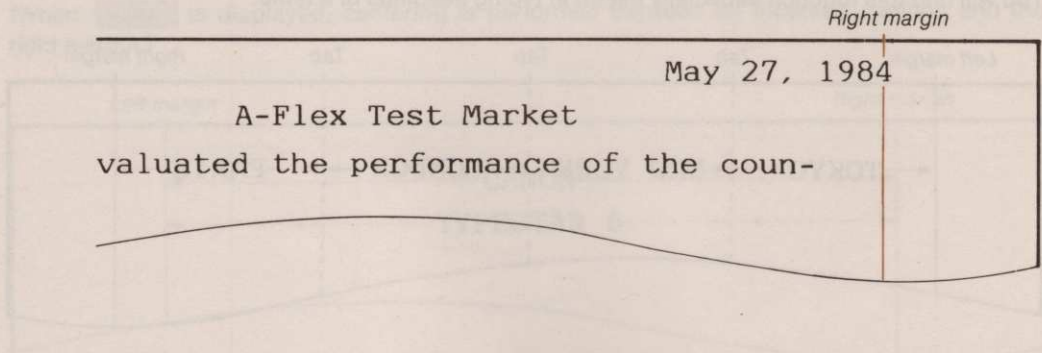

1. Press **CODE** . **CODE** will be displayed.

2. Press **3** . **CENTER** will be displayed.


3. Enter the text to be right-aligned; it will be displayed.

4. Press **RETURN** to right-align the text. The carrier will then return to the left margin of the next line.


- To cancel right-aligning operation, press **CODE** and **3** again before the text is printed.

INDENTATION

This function is used to set a temporary indent position. When **INDENT** is displayed, all consecutive lines are indented.

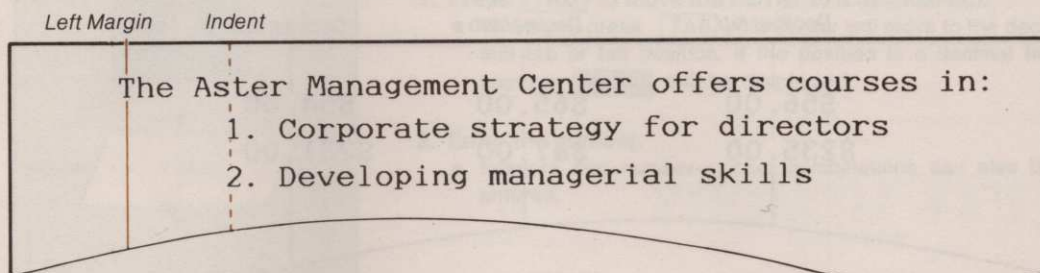


Setting an Indent Position

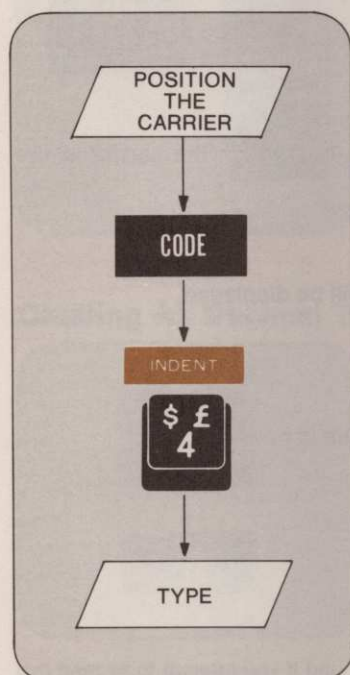

1. Press **SPACE** or **←** to position the carrier at the desired location.
2. Press **CODE**. **CODE** will be displayed.
3. Press **4**. **INDENT** will be displayed.
4. When **INDENT** is displayed, all consecutive lines are indented.
 - If you wish to start typing between the left margin and the indent position, press **←** to bypass the set indent position.

Clearing an Indent Setting

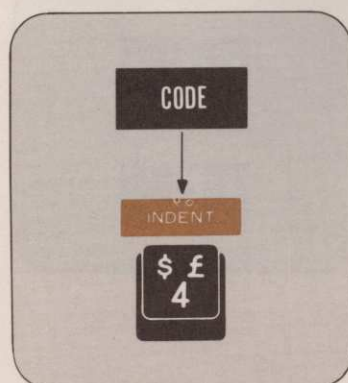

1. Press **CODE**. **CODE** will be displayed.
2. Press **4**. **INDENT** will be cleared from the display and the indent function will be cancelled.


DECIMAL TABS

This function aligns numbers using preset decimal tabs as decimal point positions. It is particularly useful for both numbers and number-symbol combinations.

Decimal tab	Decimal tab	Decimal tab
\$56.00	\$65.00	\$54.00
\$235.00	\$67.00	\$231.00

Setting Decimal Tabs

Set the print mode in **xx**.

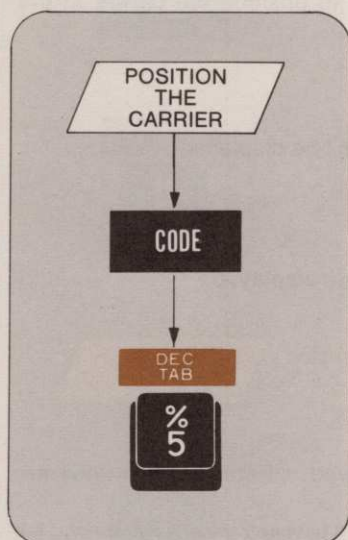


1. Press **SPACE** or **←** to position the carrier at the appropriate decimal tab.

2. Press **CODE**. **CODE** will be displayed.

3. Press **5**. The decimal tab is now set.

- A total of sixteen tabs and decimal tabs can be set. An alarm will sound if you attempt to exceed this number.
- A decimal tab cannot be set at the same position as a tab.

Executing Decimal Tabs

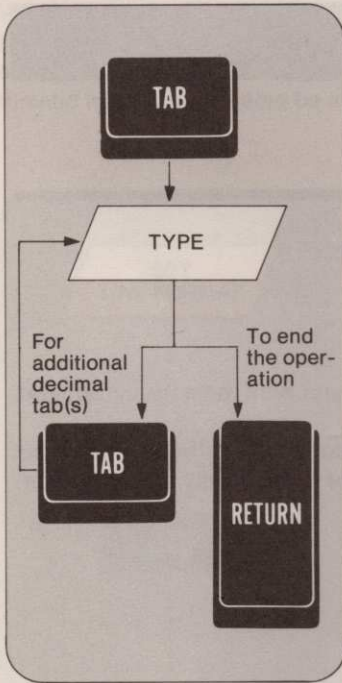

1. Press **TAB** to move the carrier to a decimal tab.
 - When you press **TAB**, the carrier will move to the decimal tab or tab position. If the position is a decimal tab position, **DECTAB** will be displayed.

2. Enter the number.
 - Integers and number-symbol combinations can also be entered.


3. Press **TAB** to align the entered number's decimal point at the preset decimal tab. The carrier will then move to the next tab or decimal tab on the same line.

- To repeat the decimal tab function on the same line, repeat steps 2-3.

When **RETURN** is pressed, the entered number's decimal point will be aligned at the decimal tab; the carrier will then return.

- If an entered number is longer than the space provided, an alarm will sound and no further entry will be possible.


Clearing All Decimal Tabs

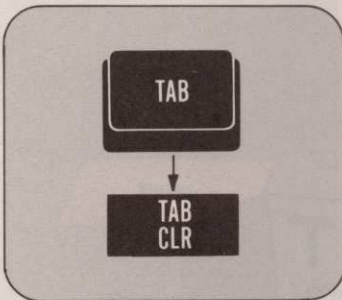

1. Press **TAB** to position the carrier at the decimal tab to be cleared; **DECTAB** will be displayed.

2. Press **TAB CLR** to clear the decimal tab.

Clearing Specific Decimal Tabs

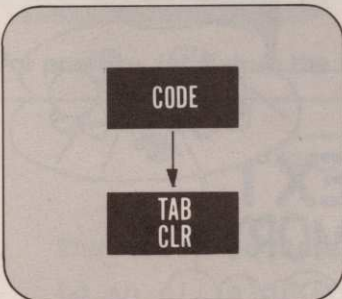

1. Press **CODE**. **CODE** will be displayed.

2. Press **TAB CLR** to clear all tabs and decimal tabs.


Part 3

TEXT MEMORY

TEXT MEMORY

The text memory stores typed texts and enables you to call, edit and print them when required.


The text memory can store about 2,000 characters (equivalent to one A4 or letter size page). Texts can be stored under twenty-six different titles. This feature is especially useful for storing fixed sentences and frequently used addresses.

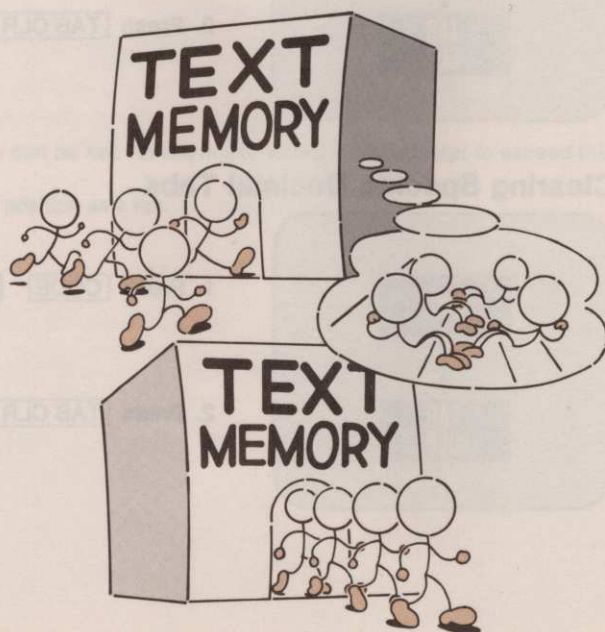

STORING TEXTS

When storing texts, allot titles to them for later recall.

Line formats—right and left margins, tabs, decimal tabs, and hot zone setting are automatically stored in the memory along with the text. Centering, right margin alignment, and other automatic functions can also be stored.

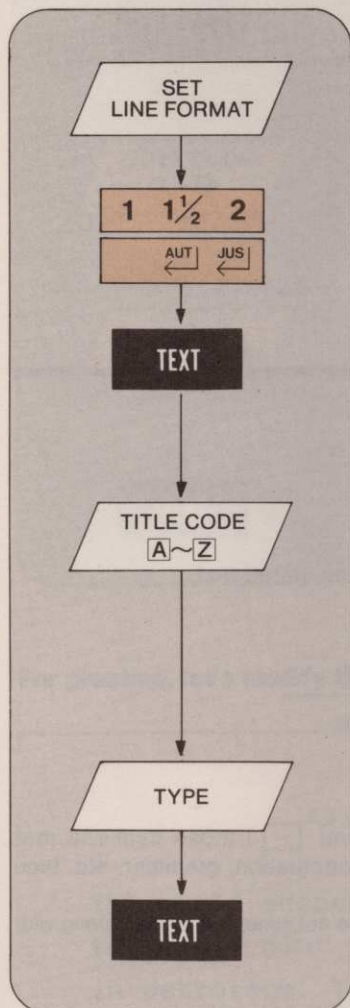


1. Set the right and left margins and, if necessary, the tabs, decimal tabs, and hot zone.

- Clear all unnecessary tabs and decimal tabs.

2. Set the typewriter to the required line spacing mode and carrier return mode.


- The typewriter cannot be set for manual carrier return () during text memory operation.

 3. Press **TEXT**. Alphabetic characters from A to Z are displayed for use as the titles of texts to be stored.



4. Choose a title by pressing the corresponding key (from A to Z).

 If you enter A, it will be displayed as shown below, indicating that the typewriter is ready to store a text.



5. Enter your text, which will then be printed line-by-line.

- Centering, right margin alignment, indentation, and other automatic functions can also be stored.

6. Press **TEXT** to complete the operation.

For practice, let's store the text below.

GLOBAL RECOVERY

The world economic recovery is due no doubt in part to an oil glut which resulted from a decreased demand in petroleum. This condition has given many depressed industries in Europe a second chance for....

Keyboard Lock at the Right Margin

When the keyboard locks at the right margin during text storage, follow the procedures described below.

For entering a hyphen for a carrier return

1. Press  to release the keyboard lock.
2. Press  to delete the character(s) adjacent to the right margin.
3. Type a hyphen to return the carrier.

For continued typing without a carrier return

1. Press **MARGIN RELEASE** to release the keyboard lock.
You can continue typing on the same line.
2. Type a space to return the carrier.

Hyphens and Spaces during Text Storage

Hyphens

Hyphens entered during text storage are not printed along with the stored text.

Example:

Storing	Printout
give-and-take ordinary hyphen	giveandtake

Remember to enter as permanent hyphens (Press **CODE** and ) those hyphens that must be preserved as entered into the stored text for proper punctuation, grammar, etc. (see page 25 for a description of permanent hyphens).

- While printing a stored text, when an ordinary hyphen appears in the hot zone, it is printed along with the text, and the carrier returns.

Spaces

When a stored text is printed in a newly set line format, the carrier return position changes; this may cause printing on two different lines those words which should be on the same line.


Example:

Storing	Printout
-----TYPESTAR 6	-----TYPESTAR 6


To prevent this, enter a permanent space between these words (press **CODE** and **SPACE**) (see page 25 for a description of permanent spaces).

REVIEWING/MODIFYING A STORED TEXT ON THE DISPLAY


You can review a stored text and make any necessary corrections or modifications on the display.

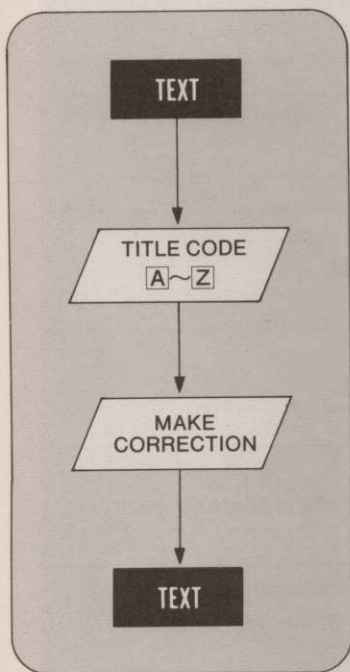

 1. Press **TEXT**. Underlined titles indicate stored texts.



 2. Press the title that corresponds to the desired text. Let's use A here.



3. The first 30 characters of the text are displayed. Move the cursor to display subsequent text (see page 36). Correct text, if necessary.
 - For the addition or deletion of automatic functions, see page 42.
4. Press **TEXT** to complete the operation.

For practice, let's modify the text on page 33 which is stored as below.

GLOBAL RECOVERY


The world economic recovery is due no doubt in part to an oil glut which resulted from a decreased demand in petroleum. This condition has given many depressed industries in Europe a second chance for..

the U.S.

economically

Moving the Cursor in a Displayed Text

RELOC	Moves the cursor to the end of a text.
CODE + RELOC	Moves the cursor to the head of a text.
	Moves the cursor one space to the right.
	Moves the cursor one space to the left.
LEFT MARGIN	Moves the cursor to the first character of the preceding word.
RIGHT MARGIN	Moves the cursor to the last character of the next word.

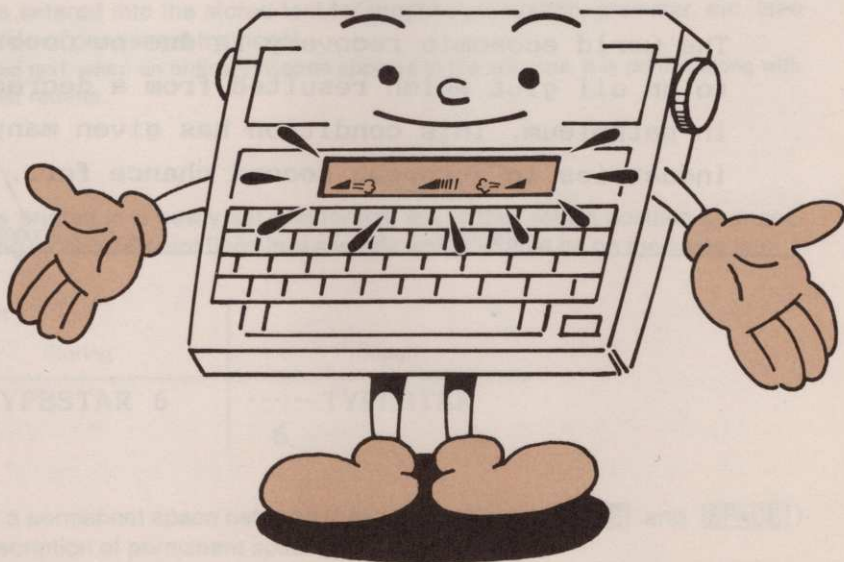

Command Symbols

When a stored text is displayed, tab, indentations, right margin alignment, and other automatic functions are represented by the following command symbols:

 Permanent hyphen	 Begin indentation
 Permanent space	 End indentation
 Tab	 Centering between margins
 Carrier return	 Centering between tabs
 Begin double-width print	 Right margin alignment
 End double-width print	 Decimal tab




Represents those characters that cannot be displayed—non-automatic functions. These characters, however, will be printed.

PRINTING A STORED TEXT

A stored text can be printed in either a stored line format or a newly set line format. As for the line spacing and carrier return modes, however, printing follows those settings established in printing, regardless of those set in storage.


Printout in the stored line format

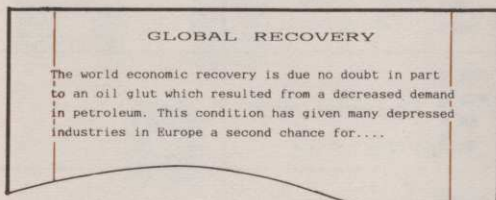

(The typewriter has been set for automatic carrier return ).


Printout in a newly set line format

(The right and left margins have been changed.)

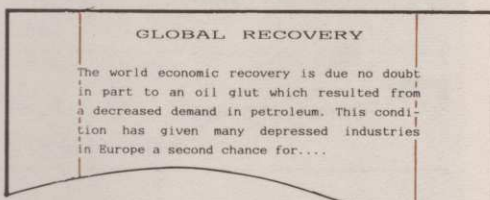


(The typewriter has been set for a justified print-out .

Printing a Stored Text in a Stored Line Format

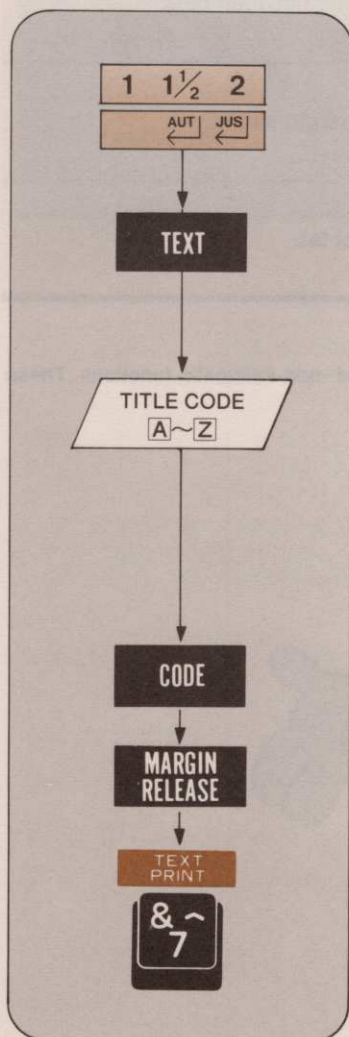

1. Set the typewriter to the required line spacing and carrier return modes.

 2. Press TEXT. Underlined titles indicate stored texts.



3. Press the title that corresponds to the desired text. Let's use A here.

The first thirty characters of the called text are displayed.

- You can check, modify, or correct the text in this step.




4. Press CODE. CODE will be displayed.

5. Press MARGIN RELEASE.

6. Press 7 to print the text in the stored line format.

- When the printing is completed, the typewriter will return to the set line format prior to printing.

Printing a Stored Text in a Newly Set Line Format

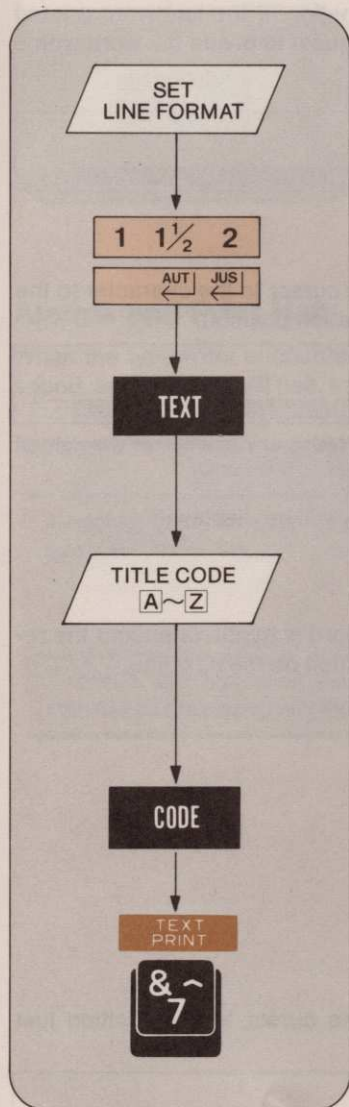


1. Set the right and left margins and, if necessary, the tabs, decimal tabs, and hot zone.


- Clear unnecessary tabs and decimal tabs.

2. Set the typewriter to the required line spacing and carrier return modes.

 3. Press **TEXT**. Underlined titles indicate stored texts.



 4. Press the title that corresponds to the desired text.
Let's use A here.



The first thirty characters of the text will be displayed.

- You can check, modify, or correct the text in this step.

5. Press **CODE**. **CODE** will be displayed.

6. Press **7** to print the text in the newly set line format.


PRINTING A STORED TEXT

Hyphenation Requests during Printing

A display similar to the one below shows a request for hyphenation. If the last word printed cannot fit into the hot zone, the carrier will stop, indicating a request to divide the word with a hyphen. In such a case, follow the procedures described below.

A: condition									
US	L	XX		A	TEXT 1				

Hyphenating a Word

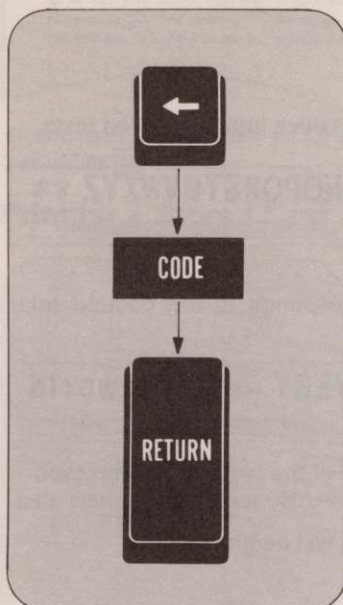


1. Press to move the cursor to the character to the left of the proper hyphenation position.

A: condition									
US	L	XX		A	TEXT 1				

- No hyphen can be inserted in any position to the right of the original cursor position.
2. Press . will be displayed.
 3. Press . The word is hyphenated and the remaining syllables are printed on the next line.


Printing a Word without Hyphenation

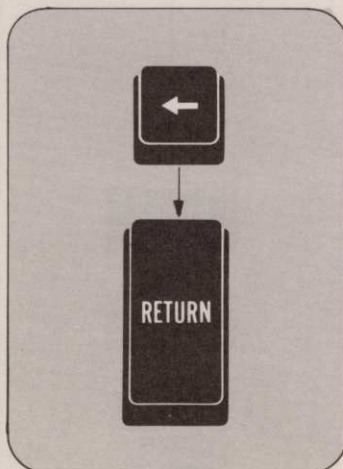

1. Press to move the cursor to the position just before the word.

A: Europe									
US	L	XX		A	TEXT 1				

2. Press to resume printing and place the displayed word on the next line.

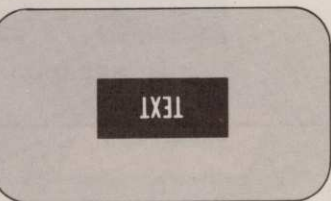

To Terminate Printing

Press **TEXT** to terminate the printing of a stored text. Printing stops after the current line has been printed.

- The typewriter cannot resume printing from the halted position.

Alarms and Print Halt

When the typewriter encounters an automatic function that cannot be executed, the alarm will sound, and printing will halt. In such a case, check the following:

Condition	Check
A stored text has been printed in a newly set line format.	• Are the newly set tabs and decimal tabs compatible with the stored text? • Did you clear all unnecessary tabs and decimal tabs? • Are the newly set margins compatible with the stored tabs, decimal tabs, centering, and indentation?
A stored text has been corrected or modified on the display and then printed.	• Is the correction or modification compatible with the line format to be used in printing?

ADDING/DELETING THE COMMANDS OF AUTOMATIC FUNCTIONS

Centering, indentation, and other automatic functions can be added to or deleted from a stored text on the display.

Adding/Deleting an Indent Position

The Aster Management Center offers courses in:

1. Corporate strategy for directors
2. Developing managerial skills

Addition

Deletion


The Aster Management Center offers courses in:

1. Corporate strategy for directors
2. Developing managerial skills

You can add to or delete from a stored text indentation by adding or deleting the indentation start and stop symbols  and  on the display.

Addition

Let's block-indent items 1 and 2 in the sample text.

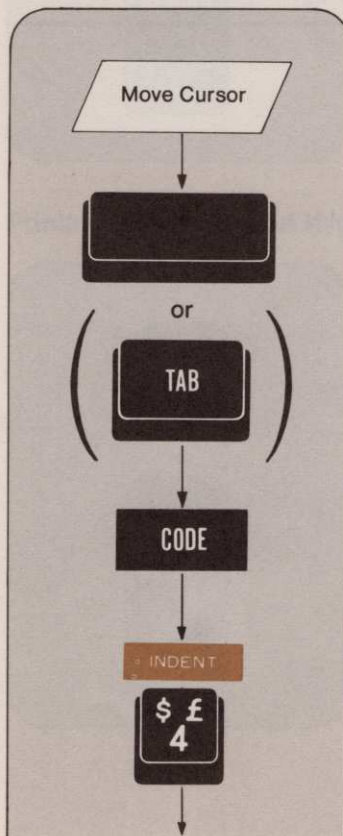

1. Move the cursor to the left of the head of the block to be indented.

courses in: 1. Corporate str

2. Press **[SPACE]** for the correct number of spaces to be indented.


- Press **[TAB]** for indentation to a tab position.

courses in: 1. Corporat

3. Press **[CODE]**. **[CODE]** will be displayed.

4. Press **[4]** and the indentation start symbol  will be inserted on the display.

courses in: 1. Corpora

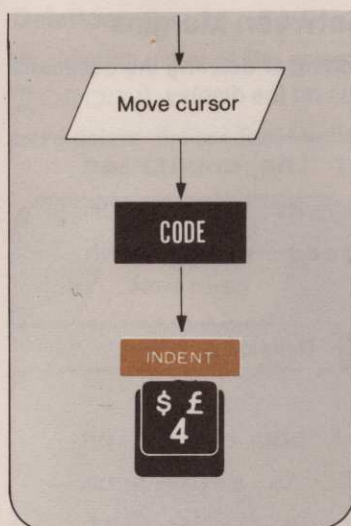

5. Move the cursor to the end of the block to be indented.

Developing managerial skills

INDENT TEXT

6. Press [CODE]. [CODE] will be displayed.

7. Press [4] and the indentation stop symbol will be inserted on the display.


Developing managerial skills

TEXT

- Additional indentation cannot be made when [CODE], [CENTER], [INDENT], or [DECTAB] is displayed.

Deletion

Let's delete the indent position added in the previous section.

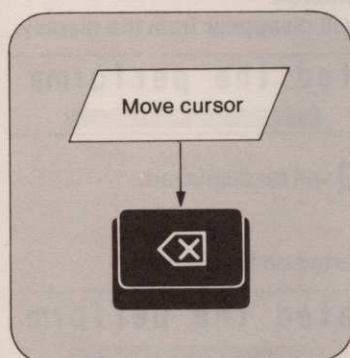

1. Move the cursor to the indentation start symbol

courses in: 1. Corporate

INDENT TEXT

2. Press [X] to delete and indent spaces or tab symbols added before

 
ers courses in: 1. Corporate

TEXT

By doing this step, the indent end symbol is automatically deleted at the same time.

ADDING/DELETING THE COMMANDS OF AUTOMATIC FUNCTIONS

Adding/Deleting the Command for Centering between Margins

You can add or delete word(s) centered between margins by adding or deleting the command symbols for centering and the words in between () on the display.

We have evaluated the performance of the countries where A-flex will be test marketed. As seen from below, the markets include countries with both stable and dynamic growth rates.

Addition


Deletion

A-Flex Test Market

We have evaluated the performance of the countries where A-flex will be test marketed. As seen from below, the markets include countries with both stable and dynamic growth rates.

Addition

Let's try to add and center "A-Flex Test Market" in the sample text.

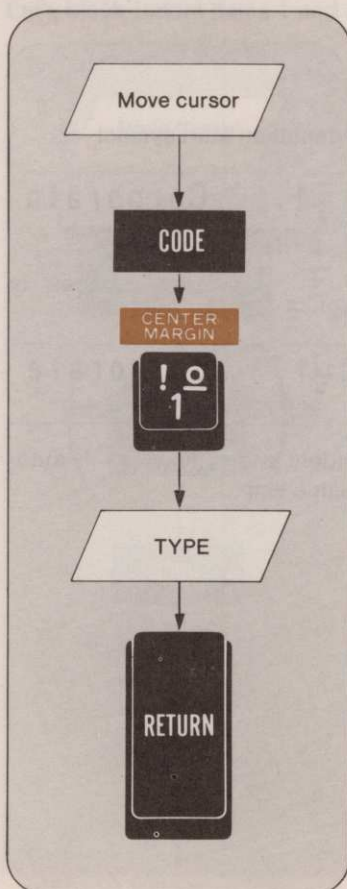

1. Move the cursor to the front of the word of which additional words are to be centered.
In this case, the cursor will disappear from the display.

We have evaluated the performa

2. Press **CODE**. **CODE** will be displayed.

3. Press **1**. **1** will be inserted on the display.

We have evaluated the perform

4. Enter the words to be centered.

A-Flex Test MarketWe have eva

5. Press **RETURN** to complete the addition.


A-Flex Test MarketWe have ev

- The additional centering of a word(s) between margins cannot be executed when **CODE**, **CENTER**, or **DECTAB** is displayed.
- Previously stored words cannot be centered.

Deletion

By deleting either of the command symbols for centering (☐ and ☐), you can delete an entire line of text.

Let's delete "A-Flex Test Market" added in the previous section.

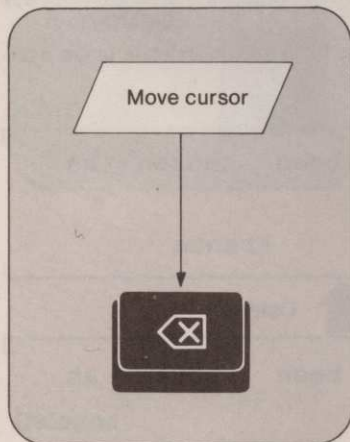

1. Move the cursor to ☐ or its companion symbol ☐.

☐A-Flex Test Market☐We have ev
CENTER TEXT

or

☐A-Flex Test Market☐We have ev
CENTER TEXT

2. Press ☐ to delete "A-Flex Test Market ☐".

We have evaluated the performa
TEXT

Adding/Deleting the Command for Centering between Tabs


You can add or delete word(s) centered between tabs by adding or deleting the command symbols for centering and the words in between (⌘○○○⇄) or (⌘○○○⇄) on the display.

- The word(s) centered between tabs can be added to or deleted from on the display regardless of the number of tabs and their set positions. For proper printing, however, the addition/deletion must be consistent with the number of tabs and their set positions (see Caution in Printing a Stored Text on page 47).
- For efficient typing, you should store, for example, a table subject to this addition/deletion under a different title.

The following manufacturers have been chosen as suppliers for the AB-F 400:		
Switch A	Dublanc	France
Addition Deletion		
The following manufacturers have been chosen as suppliers for the AB-F 400:		
Switch A	Dublanc	France
Switch B	Ina	U.S.A.
Switch C	Fuwadai	Japan

Addition

Let's add "Switch B" through "Japan" to the sample text by centering them between tabs respectively.

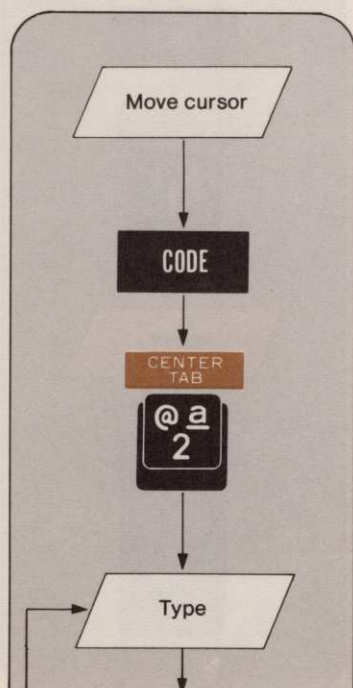

1. Move the cursor to the position at which the insertion will start.

0:⌘Switch A⇄⌘Dublanc⇄⌘France⇄


2. Press [CODE]. [CODE] will be displayed.

3. Press [2]. The command symbol for centering between tabs ⌘ will be inserted on the display.

:⌘⌘Switch A⇄⌘Dublanc⇄⌘France⇄⌘

4. Enter the word(s) to be centered between tabs.

h A⇄⌘Dublanc⇄⌘France⇄⌘Switch B⇄

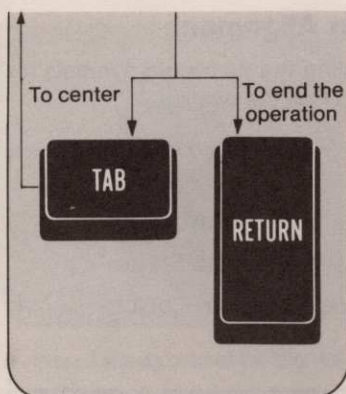

5. When two or more items are to be centered on the same line, press **TAB** after each entry. To return the carrier, press **RETURN** after each entry.

A **⌘** Dubl on c **⌘** France **⌘** Switch B **⌘**

CENTER

TEXT

or

France **⌘** Switch B **⌘** In a **⌘** U.S.A. **⌘**


TEXT

- For additional centering between tabs on the next line, begin again from step 1.
- The additional centering of an item between tabs cannot be done when **CODE**, **CENTER**, or **DEC TAB** is displayed.
- A stored word or words cannot be centered between tabs.

Deletion

By deleting either of the command symbols for centering (**⌘**, **⌘** or **⌘**), you can delete an entire **⌘**○○○○**⌘** or **⌘**○○○○**⌘**.

Let's delete the "Switch B" through "Japan" added in the previous section.

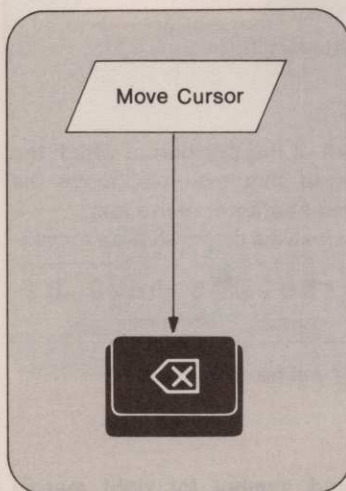

1. Move the cursor to the command symbol **⌘** or its companion symbol **⌘** for a centered item to be deleted.

⌘ France **⌘** Switch B **⌘** In a **⌘** U.S.A. **⌘**

CENTER

TEXT

or

⌘ France **⌘** Switch B **⌘** In a **⌘** U.S.A. **⌘**

TEXT

2. Press **⌘**, and "**⌘** switch B **⌘**" will be deleted.

⌘ Dubl on c **⌘** France **⌘** In a **⌘** U.S.A. **⌘**

TEXT

Repeat the steps above to delete items down to "Japan".

Caution in Printing a Stored Text

Printing in a stored line format (see page 38)

- Add or delete the centering of items between tabs consistently with the stored number of tabs and tab positions; otherwise, the entire text will not be printed.

Printing in a newly set line format (see page 39)

- Determine the number of tabs and tab positions consistent with the additional centering of items between tabs.
- Clear all unnecessary tabs.

Adding/Deleting the Command for Right Margin Alignment

You can add or delete right-aligned word(s) by adding or deleting the command symbols for right margin alignment and the right-aligned words (▢○○○○▢) on the display.

A-Flex Test Market

We have evaluated the performance of the countries where A-flex will be test marketed. As seen from below, the markets include countries with both stable and dynamic growth rates.

Addition

Deletion


May 27, 1984

A-Flex Test Market

We have evaluated the performance of the countries where A-flex will be test marketed. As seen from below, the markets include countries with both stable and dynamic growth rates.

Addition

Let's add "May 27, 1984" to the sample text aligned with the right margin.

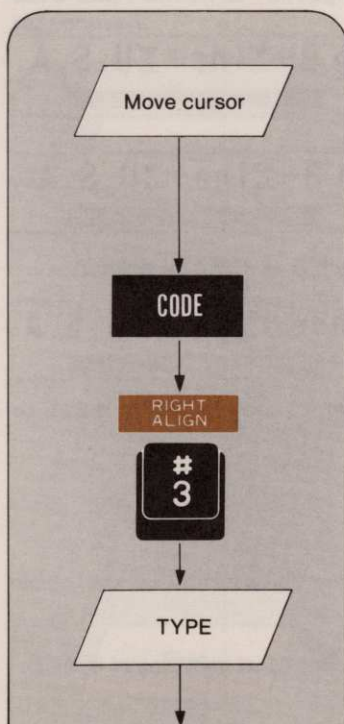

1. Move the cursor to the left of the position at which the addition is to be made. In this example, move the cursor to the left of the first character of the text.
 - The cursor will disappear from the display in this example.

▢A▢Flex Test Market▢We have ev


2. Press **CODE**. **CODE** will be displayed.

3. Press **3**. The command symbol for right margin alignment **▢** will be inserted on the display.

▢A▢Flex Test Market▢We have e

4. Enter the word(s) to be aligned with the right margin.

▢May 27, 1984▢A▢Flex Test Mark

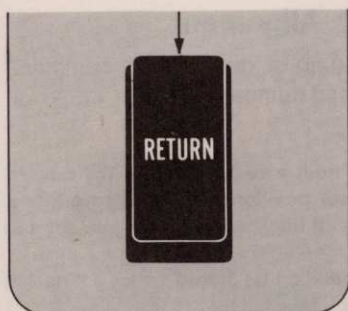

5. Press **RETURN** to complete the additional right-margin alignment.


May 27, 1984 **A+Flex Test Mar**
 TEXT

- Stored words cannot be aligned with the right margin.
- Additional right margin alignment cannot be done if **CODE**, **CENTER**, or **DECTAB** is displayed.

Deletion

By deleting either of the command symbols for right margin alignment (**May 27, 1984** or **A+Flex Test Mar**), you can delete an entire **May 27, 1984** .

Let's delete the "May 27, 1984" added in the previous section.

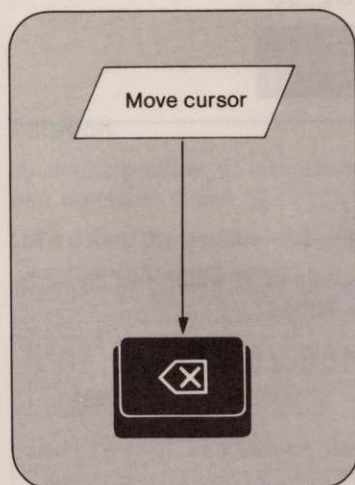

1. Move the cursor to the command symbol **May 27, 1984** or its companion symbol **A+Flex Test Mar** .

May 27, 1984 **A+Flex Test Mar**
 CENTER TEXT
 or

May 27, 1984 **A+Flex Test Mar**
 CENTER TEXT

2. Press **X** to delete "**May 27, 1984**".

A+Flex Test Market **We have ev**
 TEXT

Adding/Deleting the Command for Decimal Tab Alignment

You can add or delete a decimal-tab-aligned number by adding or deleting the command symbols for decimal tab alignment and the decimal-tab-aligned number (⌘○○○○⌘) or (⌘○○○○⌘).

- A decimal-tab-aligned number can be freely added to or deleted from a stored text on the display regardless of the number of decimal tabs and tabs and their set positions. For proper printing, however, this addition/deletion must be consistent with the number of decimal tabs and tabs set and their positions.
- For efficient typing, it is recommended that a table subject to this addition be stored under a different title.

The following table lists the economic performance for the years 1970, 1975, and 1980.

\$482.11	\$466.76	\$401.90
----------	----------	----------

Addition


Deletion

The following table lists the economic performance for the years 1970, 1975, and 1980.

\$482.11	\$466.76	\$401.90
\$251.40	\$250	\$255.42
\$163.04	\$159.13	\$140

Addition

Let's add numbers to be decimal-tabulated to the sample text.

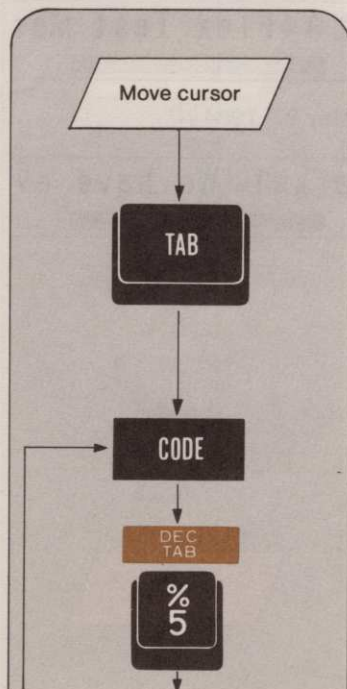

1. Move the cursor to the position at which the figure to be decimal tab aligned is added.

⌘⌘⌘\$482.11⌘⌘⌘\$466.76⌘⌘⌘\$401.90⌘⌘⌘

2. Press **TAB** as often as necessary. **DECTAB**, however, will not be displayed.

- So press **TAB** the number of times consistent with the decimal tab position of the line format to be used for printing the stored text.


⌘⌘⌘\$482.11⌘⌘⌘\$466.76⌘⌘⌘\$401.90⌘⌘⌘

3. Press **CODE**. **CODE** will be displayed.

4. Press **5**. The command symbol for decimal tab alignment ⌘ will be inserted on the display.

⌘⌘⌘\$482.11⌘⌘⌘\$466.76⌘⌘⌘\$401.90⌘⌘⌘

DECTAB TEXT

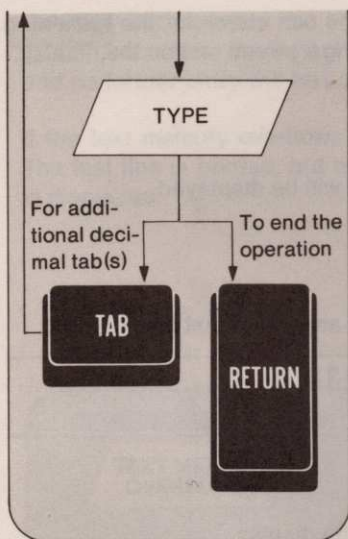

5. Enter the figure.

11÷≡\$466.76÷≡\$401.90÷≡\$251.40

DECTAB TEXT

6. When there are figures to be decimal tab aligned on the same line, press **TAB** and repeat the same procedure from step 3. To return the carrier after completing the additional procedure, press **RETURN**.

1÷≡\$466.76÷≡\$401.90÷≡\$251.40

TEXT

or

1.90÷≡\$251.40÷≡\$250÷≡\$255.42

TEXT


- Additional decimal tab alignment of figures cannot be performed when **CODE**, **CENTER**, or **DECTAB** is displayed.
- Stored figures cannot be aligned in their decimal point positions.

51

Deletion

By deleting either of the command symbols for decimal tab alignment (≡, ÷, or ÷), you can delete an entire ≡○○○○÷ or ≡○○○○÷.

Let's delete the decimal-tab-aligned figure added in the previous section.

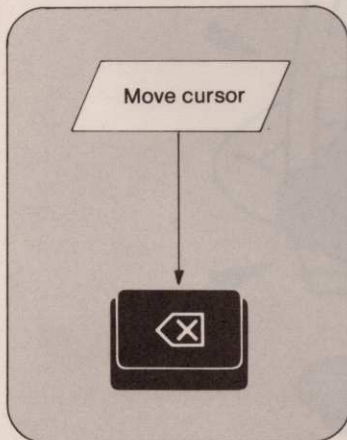

1. Move the cursor to the command symbol ≡ or its companion symbol ÷.

01.90÷≡\$251.40÷≡\$250÷≡\$255.42

DECTAB TEXT

or

01.90÷≡\$251.40÷≡\$250÷≡\$255.42

TEXT

2. Press **←X** to delete "≡\$251.40÷".

66.76÷≡\$401.90÷≡\$250÷≡\$255.42

TEXT

Caution in Printing a Stored Text

Printing in a stored line format (see page 38)


- If a decimal tab(s) is not added or deleted in consistency with the number and positions of stored tabs and decimal tabs, the alarm sounds during printing, and printing will stop.

Printing in a newly set line format (see page 39)

- Determine the number of decimal tabs and positions consistent with additional decimal tabs.
- Clear all unnecessary decimal tabs and tabs.


DISPLAYING THE TEXT MEMORY AVAILABLE FOR STORAGE

The amount of text memory in characters will be displayed. You can check for the remaining memory either during text storage or when reviewing or modifying a stored text on the display.

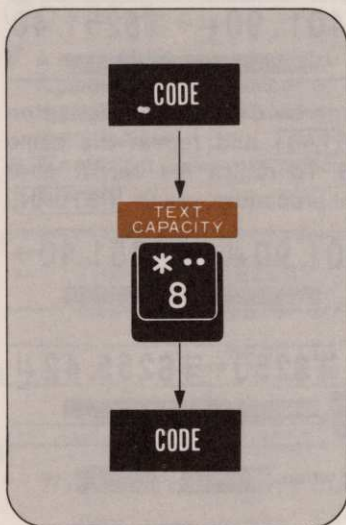

1. Press **CODE**. **CODE** will be displayed.

 2. Press **8** to display the amount of text memory left.



3. Press **CODE** to clear the display.

- Since the line format is also stored, the actual number of available characters is smaller than the displayed figure.


TEXT MEMORY OVERFLOW

Overflow occurs when the amount of text stored exceeds the text memory capacity (approx. 2,000 characters; equivalent to A4 or letter size page). In such a case, the keyboard will lock and no further entry will be possible.


If the text memory overflows during text storage, the alarm sounds and the keyboard locks. The last line is printed, but not retained in the memory. The residual amount of available text is displayed.

Example:

- 23 -				
T	L	XX	A	TEXT T

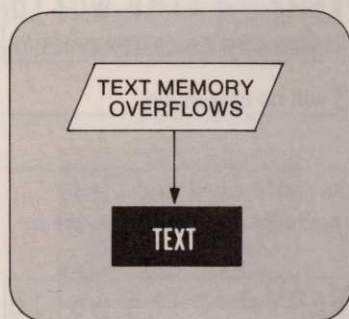


Press **TEXT** to store the entered text excluding the last line. The keyboard lock will be released. Clear any unnecessary texts from the memory to increase the capacity available.

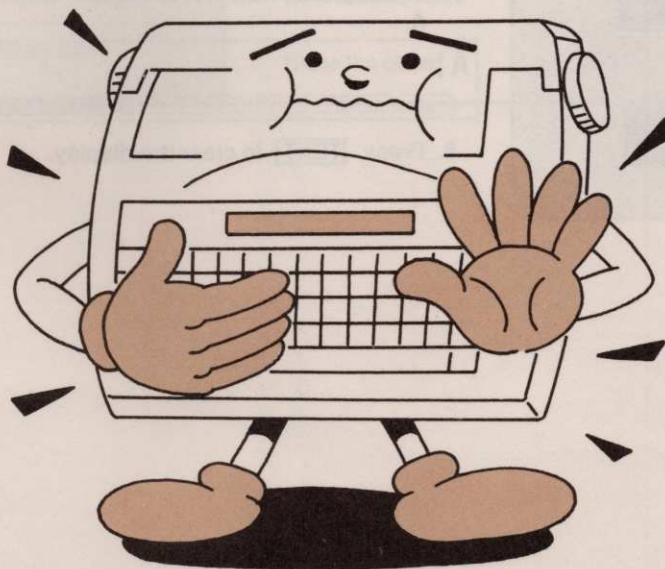

CLEARING A STORED TEXT

For the efficient use of the text memory, you should clear all unnecessary text.

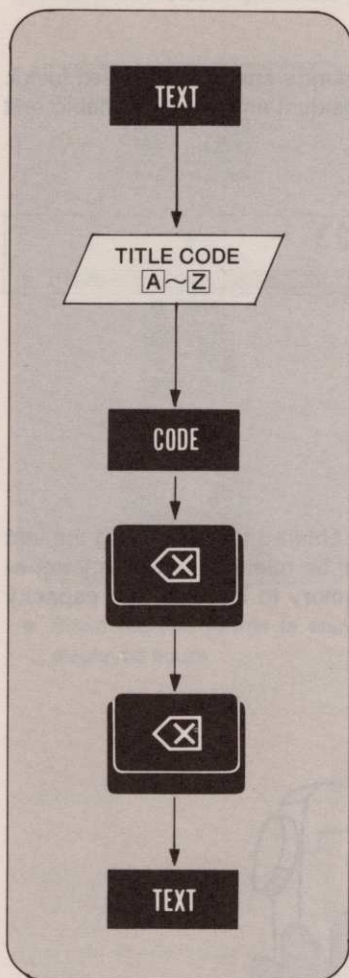

1. Press **TEXT**. Underlined titles indicate stored texts.

** ABCDEFGHIJKLMNOPQRSTUVWXYZ **

1/2 L XX [] A TEXT 1

2. Enter the character for the title (A in this example) of the text to be cleared.

A: GLOBAL RECOVERY The world

1/2 L XX [] A CENTER TEXT 1

3. Press **CODE**. **CODE** will be displayed.

4. Press **<X>**, and the displayed title will blink.

- To cancel the clearing operations at this stage, press **CODE**.

A: GLOBAL RECOVERY The world

1/2 L XX [] A CODE CENTER TEXT 1

5. Press **<X>** to clear the text from the memory. The text memory can now accommodate a new text under title A.

A;

1/2 L XX [] A TEXT 1

6. Press **TEXT** to clear the display.

Part 4

APPENDIXES

ALARMS

The TYPESTAR 6 informs you of your operational errors by sounding an alarm. The table below covers those problems that you are most likely to encounter.

Problem	Solution	Page reference
Mode setting incomplete (mode setting blinks)	Press MODE	14
Entry of printout beyond right margin attempted	Press RETURN or MARGIN RELEASE	19
CODE displayed	Press CODE	24
Text memory overflow	Press TEXT and clear unnecessary texts	53
Typestyle cartridge port is open	Close the cover	59

CARING FOR YOUR TYPESTAR 6

Daily Maintenance

Clean the outer surface of your typewriter by gently brushing or wiping off the dust with a dry, soft cloth. Do not use water or organic solvents (ketone, thinners, etc.).

Troubleshooting

The following table will help you to avoid problems with your TYPESTAR 6.

Problem	Remedy
Operation is impossible when power switch is on.	● Make sure that the batteries are loaded correctly. ● Check the AC outlet where the AC adapter is plugged in by plugging in another appliance. ● Make sure that the typestyle cartridge port is closed.
Printout is too light or too dark.	● Adjust the print density dial. ● Try a different type of paper.
Character density, character width or margins are uneven.	● Replace the batteries. ● Recharge the NiCd battery pack.
Typewriter does not print.	● Replace the ribbon cassette.
The printing head is touching the platen.	● Turn the power switch on to reposition the printing head and then off again.
Line printout is incomplete.	● Replace the batteries. ● Recharge the NiCd battery pack.

MAINTENANCE

Avoid exposing the TYPESTAR 6 to direct sunlight.



Avoid exposing the TYPESTAR 6 to high temperatures, and humidity. Never leave the typewriter in the trunk or on the dashboard of your car.



Be careful not to drop any foreign objects into the TYPESTAR 6.



Avoid using the TYPESTAR 6 in a dusty environment.


OPTIONS

The following optional features are available for use with your TYPESTAR 6.

- Canon AC Adapter AD-6 (DC 6 V 800 mA)
- NiCd Battery Pack-50 (rechargeable battery unit)
- Typestyle Cartridges
- Carrying Case-50

Do not use the TYPESTAR 6 on anything other than a Canon-specified AC adapter or NiCd battery.


Canon AC Adapter AD-6

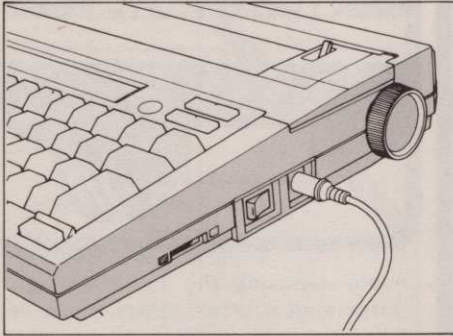

1. Turn off the TYPESTAR 6's power switch.
2. Plug the adapter into an AC outlet.
3. Insert the output plug into the AC adapter jack next to the power switch on the typewriter.
4. Turn on the TYPESTAR 6's power switch.
When the AC adapter is connected to the typewriter, the power source is switched from batteries to AC power, so it is unlikely that the batteries will be consumed.

- Do not use the adapter with any other electrical devices.
- Do not connect or disconnect the adapter jack unless the TYPESTAR 6's power switch is off.

NiCd Battery Pack-50

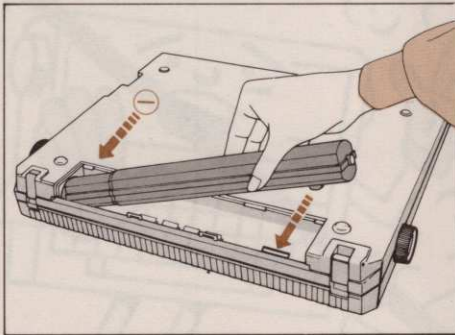

Loading

1. Turn off the TYPESTAR 6's power switch.
2. Open the battery cover. Load the Pack-50 so that the projection fits into the slot on the bottom of the battery cover.
3. Slide the battery cover back into place until you hear a click.


Recharging the battery pack

1. Make sure that the TYPESTAR 6's power switch is off.
2. Plug the Canon AC Adapter AD-6 into an AC outlet.
3. Insert the output plug of the adapter into the AC adapter jack next to the power switch on the typewriter.
4. A full charge normally takes about 10 hours. Be sure to disconnect the adapter after this time period to avoid overcharging.


- To avoid overcharging the battery, refrain from typing and recharging the battery pack at the same time.

Typestyle Cartridges

Loading

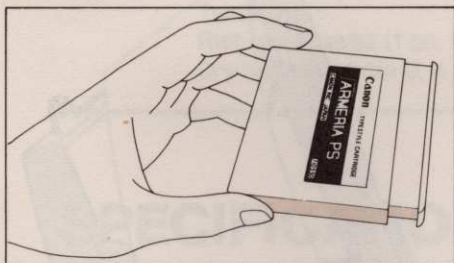


The labeled side is the face of a typestyle cartridge.

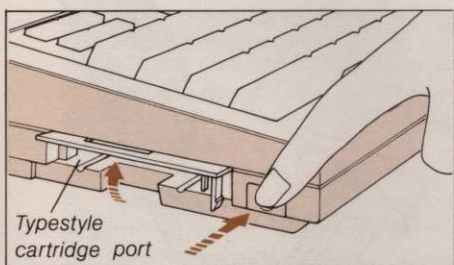


1. The typestyle cartridge port is located on the left side of the typewriter.

2. Press the button shown in the diagram, and the cover of the typestyle cartridge port will open automatically.

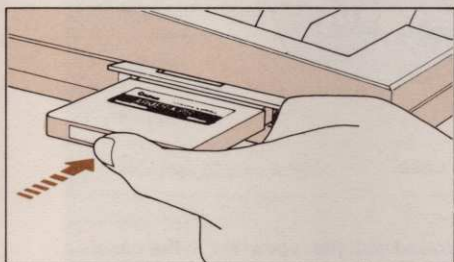


3. Press firmly to insert the typestyle cartridge. Be sure the label is facing up.

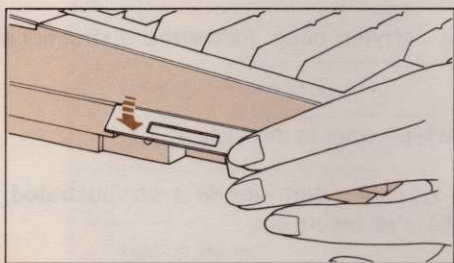

4. Close the cover until it clicks.

- Do not open the cover during printing.
- If the typestyle cartridge port cover is open, the typewriter will not operate, even with the power switch on.

Removing

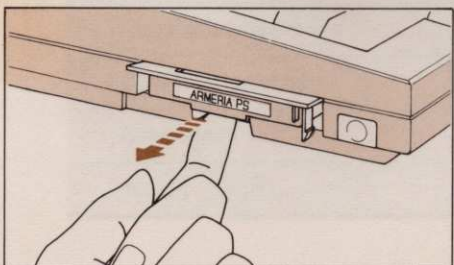

To remove a typestyle cartridge, place your finger under the projection at the bottom of the cartridge and pull out. Be sure to close the cover.


- The typestyle mode cannot be set to B if a typestyle cartridge is not installed.

OPTIONS

Carrying Case-50


The carrying case can accommodate:

- Typewriter 1 pc
- Typestyle cartridge 2 pcs
- Ribbon cassette 2 pcs
- Typing paper

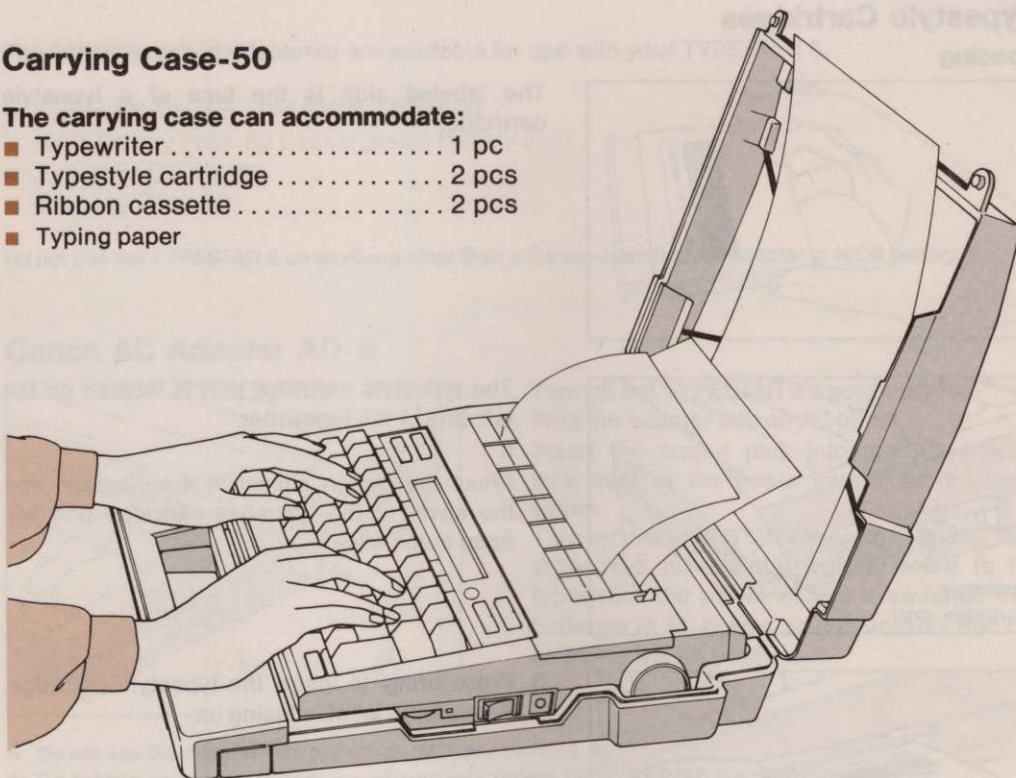

- You can type without taking the typewriter out of the case.
- The case front serves as a palm rest.
- The case cover serves as a document holder.
- The power switch and print density dial can be operated with the typewriter in the case.

To put your typewriter and accessories back in the carrying case, follow the instructions below.

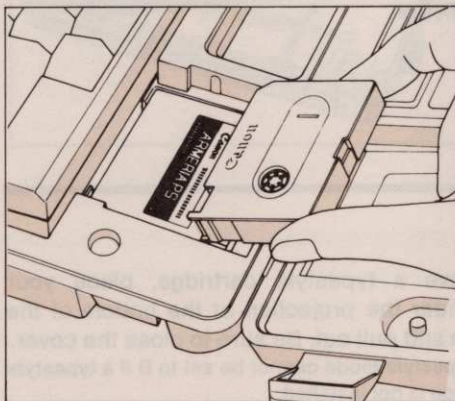

1. Put the typewriter in the case.
2. Put a typestyle cartridge first as illustrated, with the label facing up.
3. Put a ribbon cassette on the typestyle cartridge.

SUPPLIES

Typewriter
Ribbon cassette (1 pc, black)
Dry batteries (size D, 4 pcs)

Instruction Booklet
Paper (A4 or letter size, 10 sheets)
Warranty (for U.S.A. only)

SPECIFICATIONS

Printing method	32×26-dot thermal-transfer printer
Printing speed	18 characters per second
Typstyles	COURIER 10
Line spacing	1, 1-1/2 and 2 lines
Maximum paper width	230 mm (9-1/16 inches)
Maximum print width	200 mm (7-7/8 inches) (Using COURIER 10-max. -79 char.)
Display	5×7 dots, 32-character, liquid crystal display
Keyboard	44-key, multilingual keyboard
Number of characters	108 characters
Key buffer	80 characters
Key pitch	19.05 mm (3/4 inch)
Key stroke	4 mm (5/32 inch)
On-display correction	One line
Ribbon color	Black Red Blue
Ribbon life	Approx. 32,000 characters
Ribbon storage	Under 40°C (104° F) and 85% r.h.
Memory capacity	2KB
Power source	4 size-D (R20) dry batteries (6 V DC, 6 W)
Operating temperature	10°C—35°C (50°F—95°F)
Operating humidity	20%—85% r.h.
Dimensions	312 (width) × 267 (depth) × 52 (height) mm (12-9/32 in. × 10-1/2 in. × 2-1/16 in.)
Weight	2.7 kg (6 lbs.) including batteries and ribbon cassette

Subject to change without notice

Canon CANON INC.

7-1, Nishi-shinjuku 2-chome, Shinjuku-ku, Tokyo 160, Japan
P.O. Box 5050, Shinjuku Dai-ichi Seimei Building, Tokyo 160, Japan

CANON U.S.A., INC.

HEAD OFFICE One Canon Plaza, Lake Success, Long Island, N.Y. 11042, U.S.A.
CHICAGO 140 Industrial Drive, Elmhurst, Illinois 60126, U.S.A.
LOS ANGELES 123 Paularino Avenue East, Costa Mesa, California 92626, U.S.A.
ATLANTA 6380 Peachtree Industrial Blvd., Norcross, Georgia 30071, U.S.A.
DALLAS 2035 Royal Lane, Suite 290, Dallas, Texas 75229, U.S.A.

CANON CANADA INC.

HEAD OFFICE 6390 Dixie Road, Mississauga, Ontario, L5T 1P7, Canada
CALGARY 2828, 16th Street, N.E. Calgary, Alberta, T2E 7K7, Canada
MONTRÉAL 10652 Côté de Liesse, Lachine, Quebec, H8T 1A5 Canada

CANON EUROPA N.V.

P.O. Box 7907, 1008 AC Amsterdam, The Netherlands

CANON FRANCE S.A.

93154 Le Blanc Mesnil, Cedex, France

CANON U.K. LTD.

Waddon House, Stafford Road, Croydon CR9 4DD, England

CANON RECHNER DEUTSCHLAND GMBH

P.O. Box 1209 8033, München-Martinsried, West Germany

CANON LATIN AMERICA, INC.

SALES DEPARTMENT P.O. Box 7022, Panama 5, Rep. of Panama

REPAIR SERVICE CENTER P.O. Box 2019, Colon Free Zone, Rep. of Panama

CANON HONGKONG TRADING CO., LTD.

Golden Bear Industrial Centre, 7th Floor, 66-82 Chai Wan Kok Street, Tsuen Wan, New Territories, Hong Kong

CANON AUSTRALIA PTY. LTD.

1 Hall Street, Hawthorn East, Victoria 3123, Australia